

RES-X RESONATOR DELETE AND X-PIPE, B9 S4 3.0T**034 MOTORSPORT**

The 034Motorsport Res-X Resonator Delete and X-Pipe for your B9 Audi S4 3.0T unleashes a throaty growl and exotic tone that exudes the sound of performance and warns bystanders that this isn't your average family sedan.

This job requires cutting the stock exhaust. Be sure to double check that your cut line will match the factory tip location.

Installation Spiciness Rating: MILD

Installation of your 034Motorsport Res-X is a straightforward process that will take approximately one hour to complete.

Supplied Parts:

- (1x) 034Motorsport Res-X
- (2x) exhaust clamps

Tools Needed:

- 16mm Socket (8mm Allen for 034 brace)
- 13mm Socket
- Sawzall/pipe cutter
- Safety glasses
- Marker

About This Guide

This Install Guide documents the installation process on an B9.5 Audi S4. There may be minor differences depending on specific vehicle, market, options, etc.

Getting Started

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

customerservice@034motorsport.com

Installation Steps

Step 1

Raise the vehicle securely on jack stands, or a lift, to gain access to the underside of your car.




Step 2

Using an 16mm socket, remove the bolts securing the chassis brace. (Use an 8mm Allen for the 034 brace)




Step 3

Place the new Res-X mid-pipe under the factory unit as a reference for where to cut. Mark on the stock exhaust where the Res-X ends. Be sure to make your cut after the flat spot on the right-hand pipe, but before the bend.

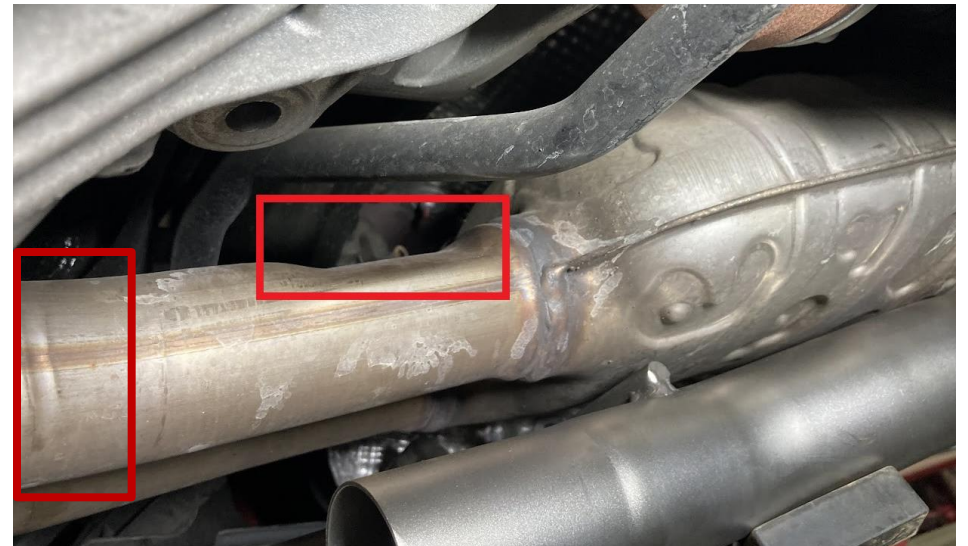

Step 4


Make your cuts, carefully, either on or off the car. Protect your eyes!

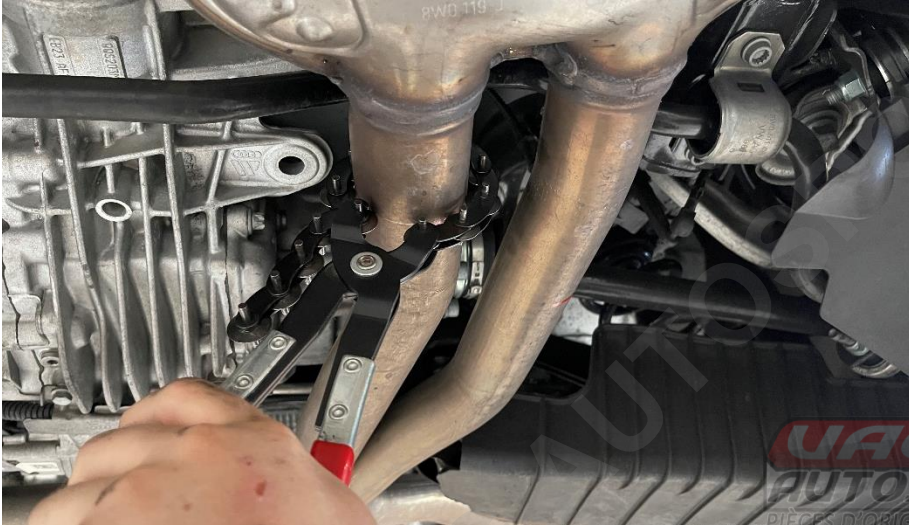**Step 5**

Remove the freshly cut factory exhaust by loosening the (4x) 13mm bolts at the exhaust junction.

**Step 6**

Transfer the exhaust hanger bracket to the 034 Res-X.

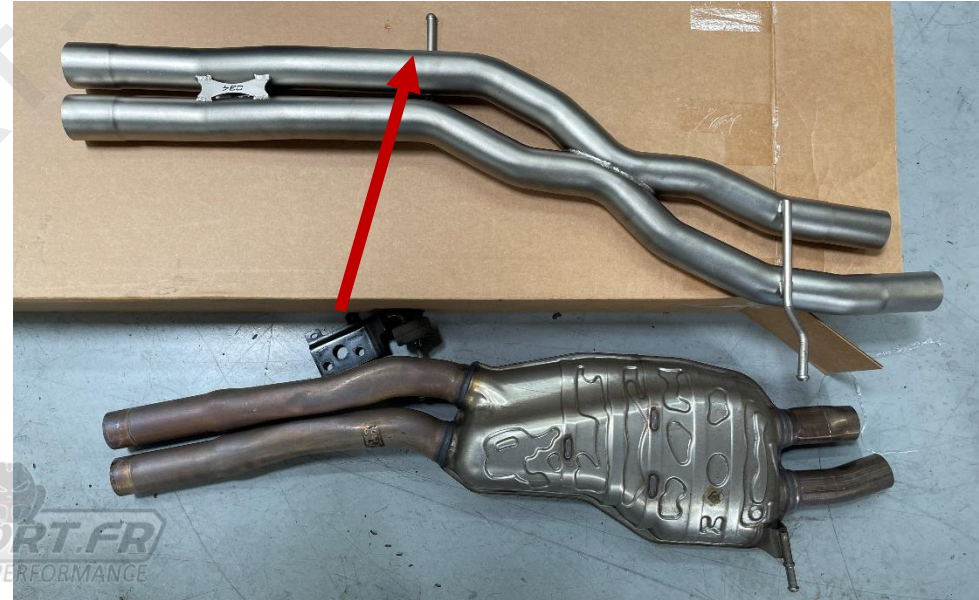**Step 7**

Butt the Res-X unit against the downpipes and tighten the 13mm nuts on the exhaust clamps.



Step 8

Make sure your exhaust hanger bracket is lined up, as it shares a hole with the chassis brace.

**Step 9**


Reinstall the chassis brace.

**Step 10**

Using a 13mm socket, secure the exhaust tip piping with the Res-X ends using the provided slip-on exhaust clamps.

**Step 11**

Install the second exhaust hanger post into the rubber bushing.

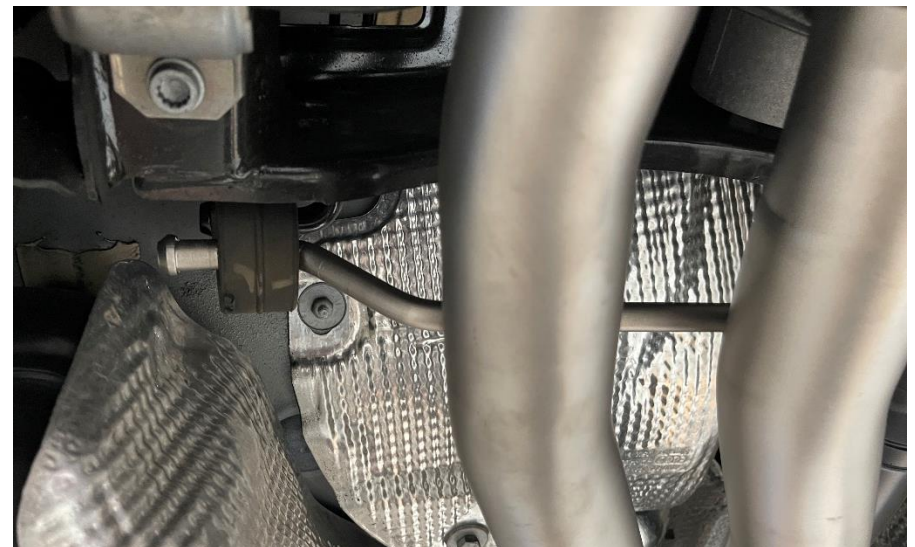

Step 12

Enjoy your new exhaust sounds.

