

## RES-X RESONATOR DELETE AND X-PIPE, B9 AUDI SQ5 3.0 TFSI

**034 MOTORSPORT**

The 034Motorsport Res-X Resonator Delete and X-Pipe for your B9 Audi SQ5 3.0T unleashes a throaty growl and exotic tone that exudes the sound of performance and warns bystanders that this isn't your average family hauler.

**\*This job requires cutting the stock exhaust. Be sure to double check that your cut line will match the factory tip location.\***

### Installation Spiciness Rating: MEDIUM



Installation of your 034Motorsport Res-X is a straightforward process that will take approximately two hours to complete.

#### Supplied Parts:

- (1x) 034Motorsport Res-X
- (2x) exhaust clamps

#### Tools Needed:

- 13mm Socket
- Sawzall
- Exhaust Hanger Pliers
- Safety Glasses
- File
- Marker

#### About This Guide

This Install Guide documents the installation process on an B9 Audi SQ5. There may be minor differences depending on specific vehicle, market, options, etc.

#### Getting Started

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

[customerservice@034motorsport.com](mailto:customerservice@034motorsport.com)

## Installation Steps

### Step 1

Raise the vehicle securely on jack stands, or a lift, to gain access to the underside of your car.



### Step 2

Disconnect the exhaust valve connector.



### Step 3

Using an 13mm socket, loosen the forward exhaust clamps.



### Step 4

Using exhaust hanger pliers, separate the front hanger from the bushing.



**Step 5**

Using exhaust hanger pliers, separate the middle hanger from the bushing.

**Step 6**

Using a 13mm socket, remove the rear exhaust hanger hardware.

**Step 7**

Remove the rear exhaust section and clamps from the underside. Set aside the clamps for later.

**Step 8**

Lay the 034 Res-X on top of old exhaust and mark a cut line. It helps to cut an extra 1/4" - 1/2" to give adjustment later.



## Step 9

Use your preferred cutting tool to cut the old exhaust along the marked line.



## Step 10

Use a file to deburr the cut on the stock exhaust.



## Step 11

Install the stock rear exhaust section by using a long 13mm socket to install the rear bolts. Use a jack to hold the front of the exhaust.



**Step 12**

Reusing the stock exhaust clamps, slide them onto the stock downpipes.

**Step 13**


Slide the provided exhaust clamps onto the stock rear exhaust.

**Step 14**

Hang the 034 Res-x by installing the two hanger rods into their respective bushings.

**Step 15**

Slide the clamps over the ends of 034 Res-X. It helps to use a pole jack or a second person to hold the segments while you tighten the clamps. Make sure everything lines up to clearance the chassis and chassis brace.

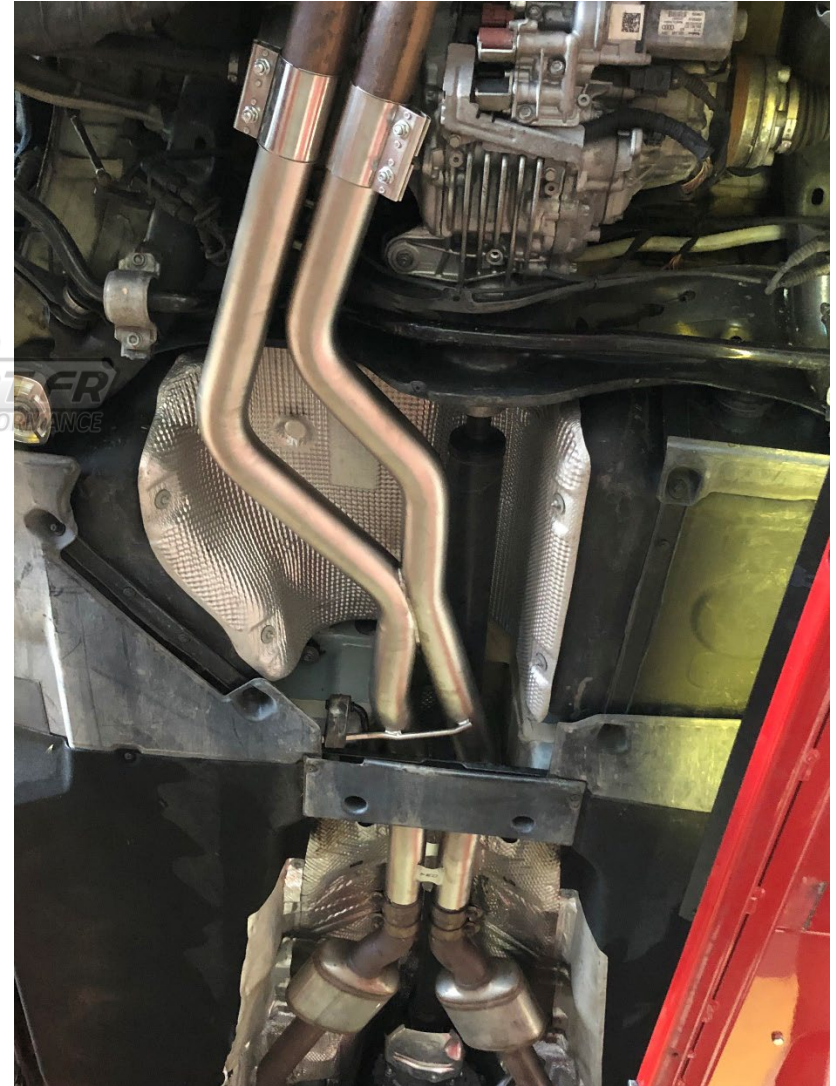

**Step 16**

Once you like the fitment, tighten up all the clamps using a 13mm socket.

**Step 17**

Reconnect the exhaust valve connector.

**Step 18**

Lower the car back down.

**Step 19**

Enjoy your new exhaust sounds.

