

**B9 RS5 Res-X Resonator Delete****034 MOTORSPORT**

The 034Motorsport Res-X Resonator Delete and X-Pipe for your B9 Audi RS5 2.9T unleashes a throaty growl and exotic tone that exudes the sound of performance and warns bystanders that this isn't your average family sedan.

**\*This job requires cutting the stock exhaust. Be sure to double check that your cut line will match the factory tip location.\***

**Installation Spiciness Rating: MEDIUM**

Installation of your 034Motorsport Res-X is a straightforward process that will take approximately two hours to complete.

**Supplied Parts:**

- 034Motorsport Res-X (Left Side - 105-7057)
- 034Motorsport Res-X (Right Side - 105-7058)
- (2x) Exhaust clamps

**Tools Needed:**

- 13mm Socket
- Sawzall
- Safety Glasses
- File
- Marker

About This Guide

This Install Guide documents the installation process on an B9 Audi RS5. There may be minor differences depending on specific vehicle, market, options, etc.

Getting Started

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

[customerservice@034motorsport.com](mailto:customerservice@034motorsport.com)

### Installation Steps

#### Step 1

Raise the vehicle securely on jack stands, or a lift, to gain access to the underside of your car.




#### Step 2

Using an 13mm socket, loosen the exhaust clamps.



#### Step 3

Using a pole jack or a helper, support the exhaust.

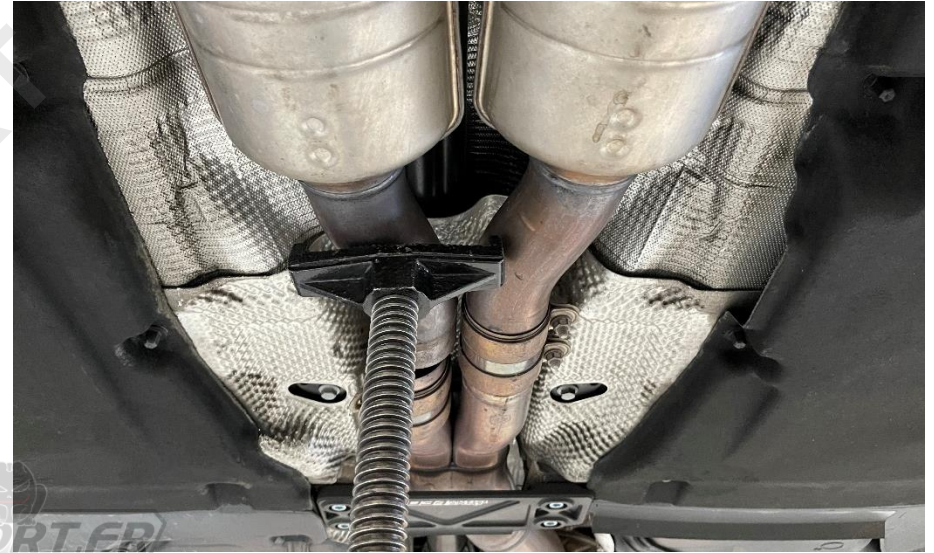

#### Step 4

Hold the 034 Res-X up to the old exhaust and mark a cut line. It helps to cut an extra 1/4" - 1/2" to give adjustment later.



**Step 6**


Use your preferred cutting tool to cut the old exhaust along the marked line. Be careful not to cut the heat shielding!

**Step 7**

Use a file to deburr the cut on the stock exhaust.

**Step 8**


Slide the provided exhaust clamp onto the stock exhaust.

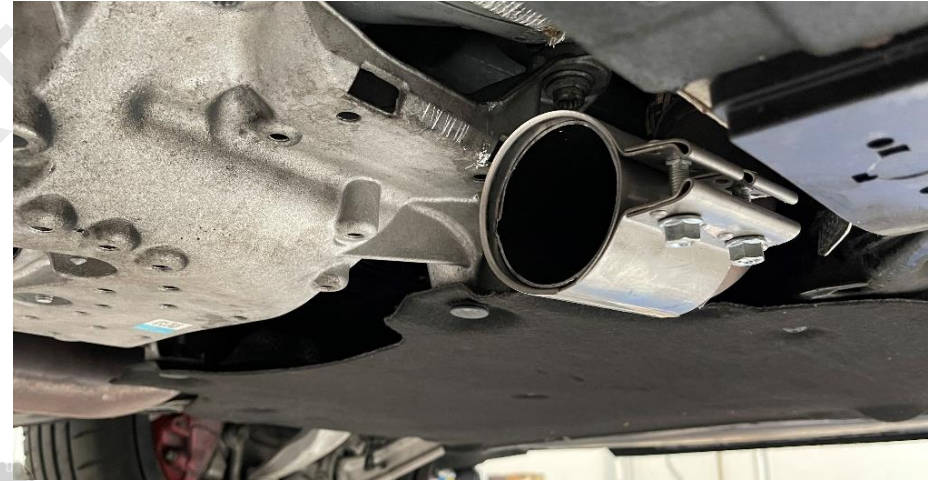**Step 9**

Reusing the stock exhaust clamp, slide it onto the tapered end of the 034 Res-X.

**Step 10**

Install the 034 Res-X section into your exhaust system, securing with the exhaust clamps.

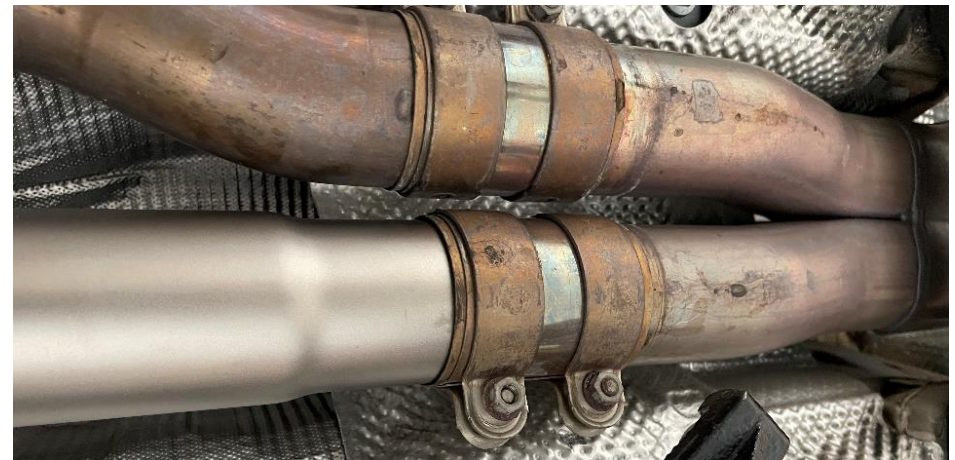


#### Step 11

Using an 13mm socket, tighten the exhaust clamps.



#### Step 12

Repeat this process for the other side.

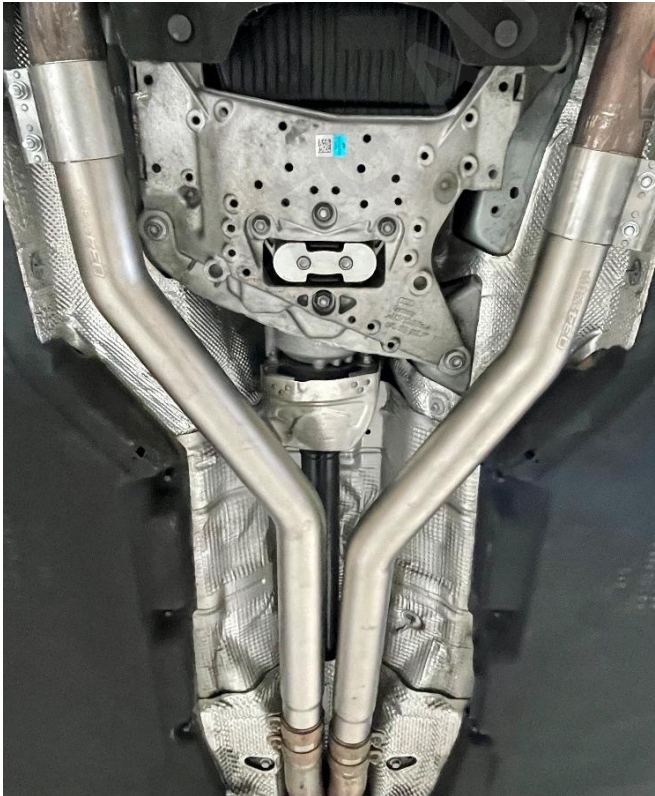

#### Step 13

Lower the car back down.



#### Step 14

Enjoy the go-fast goodies!

