

B8/8.5 S/Q5 Res-X



034 MOTORSPORT

The 034Motorsport Res-X Resonator Delete and X-Pipe for your B8 Audi SQ5 3.0T unleashes a throaty growl and exotic tone that exudes the sound of performance and warns bystanders that this isn't your average family sedan.

*This job requires cutting the stock exhaust. Be sure to double check that your cut line will match the factory tip location

Installation Spiciness Rating: Mild



Installation of your 034Motorsport Res-X is a straightforward process that will take approximately one hour to complete.

Supplied Parts:

- (1x) 034 Res-X Mid-pipe
- (2x) Exhaust Clamps

Tools Needed:

- 13mm socket
- Pole Jack
- Sawzall
- Safety glasses
- Marker

About This Guide

This Install Guide documents the installation process on an B8 Audi SQ5. There may be minor differences depending on specific vehicle, market, options, etc.

Getting Started


Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

customerservice@034motorsport.com

Allow car to cool off before starting

Step 1

Raise the vehicle securely to gain access to the underside of your car.

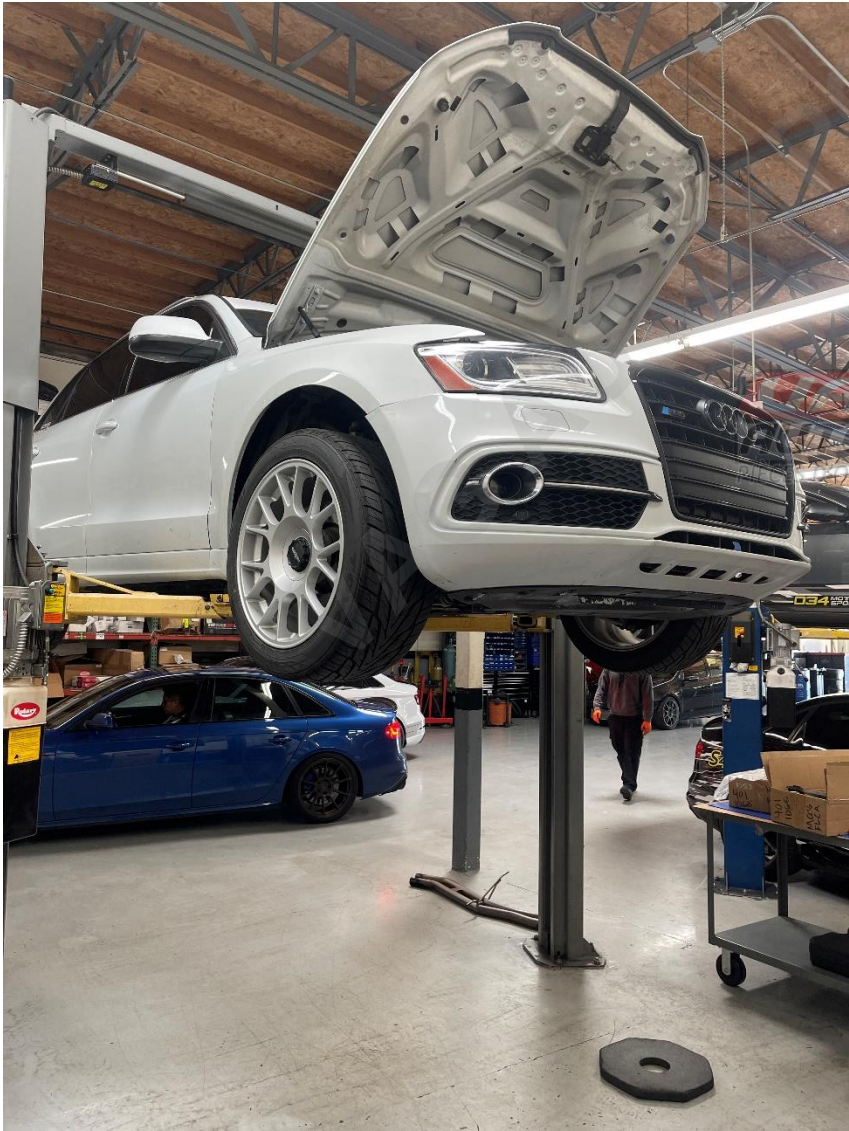

Step 2

Place the new Res-X mid-pipe under the factory unit as a reference for where to cut. Make a mark on each of the stock resonator pipes where the 034 Res-X terminates.



Step 3

Carefully make your cuts. Protect those eyeballs!
(B9 S4 exhaust shown here, but same idea)



Step 4

Use a pole jack to support the rear muffler section of the exhaust.

Step 5

Using a 13mm socket, loosen the exhaust clamps. Slide the stock exhaust clamps onto the ends of the mid-pipes.

**Step 6**

Remove the resonator section from the stock rubber exhaust bushings.

Step 7

Slide the provided exhaust clamps onto the back end of 034 Res-X.

**Step 8**

Insert the 034 Res-X exhaust hangers into the rubber bushings.

Step 9

Using a 13mm socket, tighten the stock exhaust clamps to secure the mid-pipes to the 034 Res-X.



Step 10

Using a 13mm socket, tighten the provided exhaust clamps to secure the rear muffler to the 034 Res-X.



Step 11

You are done. Remove the pole jack, lower the car, and enjoy the upgrade!

