

MQB EVO AWD Silicone Intake Hose**034 MOTOR SPORT**

034Motorsport's upgraded air intake hose is designed to replace the restrictive corrugated factory unit and features a larger cross-sectional area with smooth internal walls for higher flow and increased performance. This durable, high quality silicone hose was modeled directly off the factory part to ensure perfect fit and finish, and extensively tested at 034Motorsport. In addition to cloth reinforcement, this hose features stainless steel wire reinforcement to prevent collapse under vacuum.

Installation Spiciness Rating: MILD



Installation of your 034Motorsport Silicone Intake Hose a straightforward process that will take approximately 1 hour to complete.

Supplied Parts:

- 034Motorsport Intake Hose
- 034Motorsport Turbo Recirculation Adapter
- (2x) 90mm Hose Clamps
- 40mm Hose Clamp

Tools Needed:

- Channel-lock Pliers
- Flathead Screwdriver

Getting Started

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

customerservice@034motorsport.com

About This Guide

This Install Guide documents the installation process on an 8Y Audi S3. There may be minor differences depending on specific vehicle, market, options, etc.

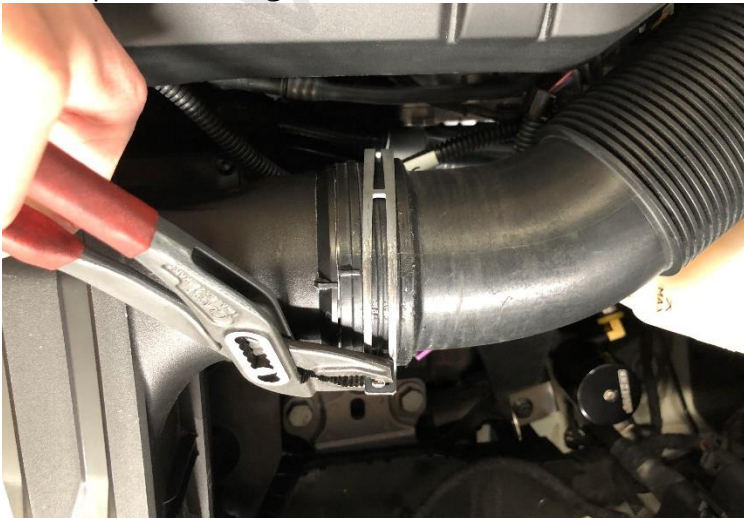
***Be sure to clean out any intake related components to remove any possible contaminants.**

Install Steps**Step 1**

Open your hood to access the intake system.

**Step 2**

Use the channel-lock pliers to loosen and move the spring clamp connecting the intake hose to the airbox.

**Step 3**

Using a flathead screwdriver, loosen and move the hose clamp connecting the intake hose to the turbo inlet.

**Step 4**

Squeeze the tabs on the turbo recirculation adapter to release it from the airbox.



Step 5

Extract the intake hose from the engine bay.



Step 6

Install the 034 intake hose into the stock location.



Step 7

Using a flathead screwdriver, secure the intake hose to the airbox and turbo inlet with the provided hose clamps.



Step 8

Push the turbo recirculation adapter into the airbox provision.

**Step 9**

Using a flathead screwdriver, secure the turbo recirculation adapter to the intake hose with the provided hose clamp.

**Step 10**

Close your hood.

Step 11

You're done. Enjoy!

