

Turbo Inlet Kit, 8Y S3/Mk8 Golf R**034 MOTOR SPORT**

The 034Motorsport Turbo Inlet for the 2.0 TFSI Gen4 in the Audi 8Y S3 and Mk8 Golf R is an essential upgrade to optimize power by eliminating a critical flow restriction in the intake tract. The turbo inlet is precision assembled and utilizes CNC-Machined 6061-T6 Aluminum Turbo Inlet Adapters that perfectly mate to allow smooth air entry into the compressor housing.

## Installation Spiciness Rating: MILD



Installation of your 034 Turbo Inlet Kit is a straightforward process that should take approximately 30 minutes to complete.

**Supplied Parts:**

- 034 Turbo Inlet
- 034 Turbo Inlet Adapter Ring

**Tools Needed:**

- T30 Torx bit
- Flathead Screwdriver
- Small pick

Getting Started

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

[customerservice@034motorsport.com](mailto:customerservice@034motorsport.com)

About This Guide

This Install Guide documents the installation process on an 8Y Audi S3. There may be minor differences depending on specific vehicle, market, options, etc.

**\*Be sure to clean out any intake related components to remove any possible contaminants.**

### Install Steps

#### Step 1

Open the hood.




#### Step 2

Disengage the intake breather hose. It's on the underside.




#### Step 3

Using a flathead screwdriver, loosen both hose clamps for the intake hose, and disengage the hose from the stock inlet.

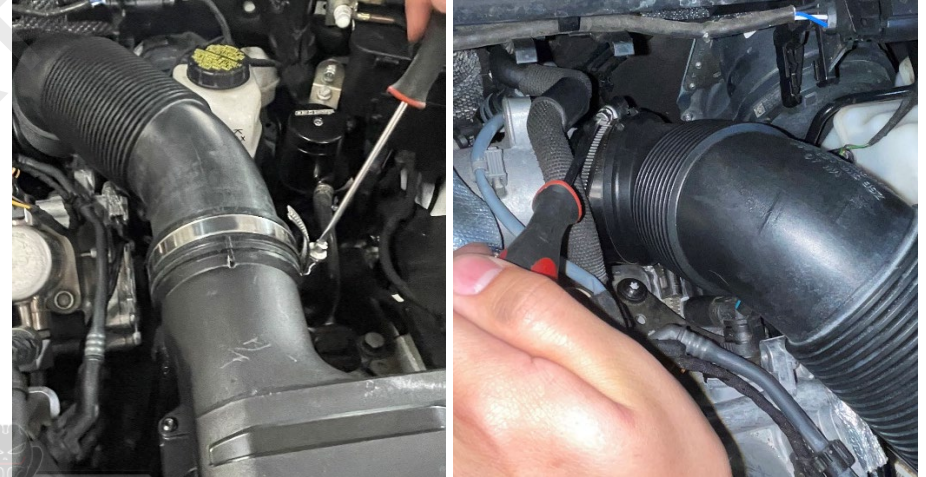

#### Step 4

Using a T30 Torx bit, remove the bolts securing the inlet to the turbo housing. The second bolt is behind the inlet.

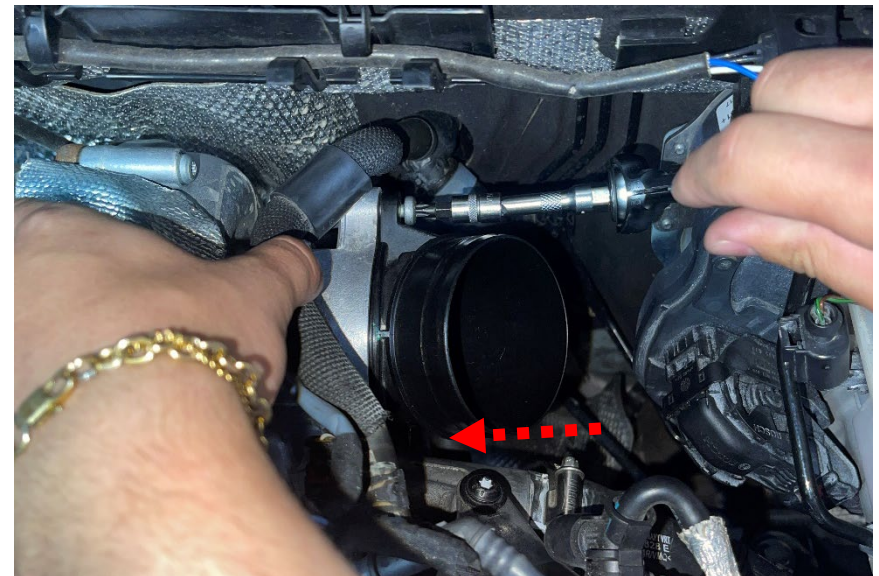

#### Step 5

Remove the stock turbo inlet.




#### Step 6

Install the 034 Turbo Inlet.




#### Step 7

Using a T30 Torx bit, secure the 034 inlet with the factory hardware.

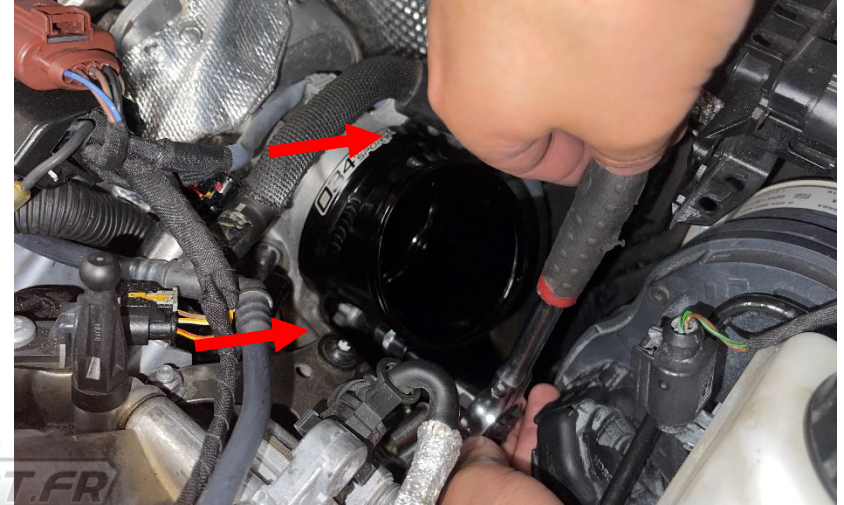

#### Step 8

Reinstall the intake hose. Using a flathead screwdriver, tighten both hose clamps.

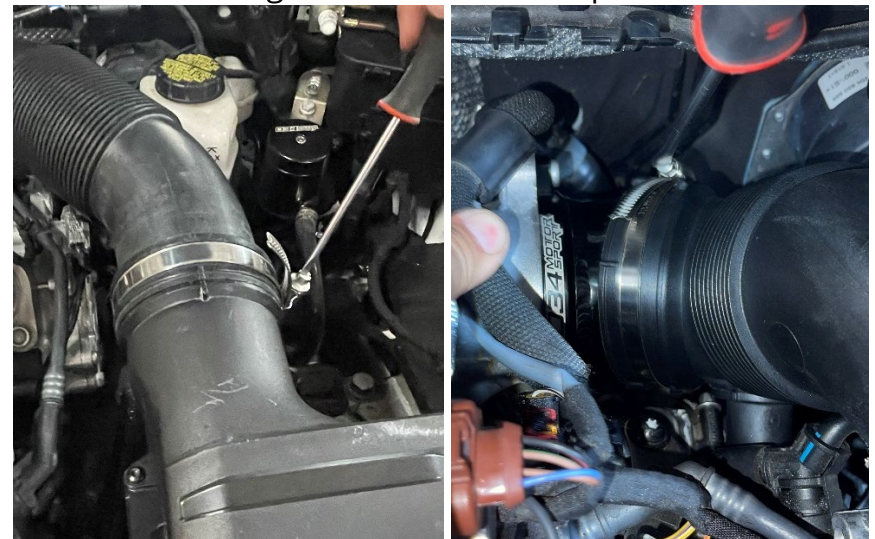

**Step 9**

Reinstall the intake breather hose.

**Step 10**

Close your hood and enjoy the added performance.

