

EA888.3 Billet Oil Filter Housing**034 MOTORSPORT**

034Motorsport's Billet Oil Filter Housing is a direct replacement to the factory plastic piece that can be installed in minutes. The black anodized 6061-T6 billet will last the lifetime of the vehicle and will add another layer of finish to your engine bay.

Installation Spiciness Rating: MILD

Installation of your 034Motorsport Rear Sway Bar is a straightforward process that will take approximately 30 minutes to complete.

Supplied Parts:

- (1x) 034 Billet oil filter housing

Tools Needed:

- 32mm Socket
- Torque Wrench

About This Guide

This Install Guide documents the installation process on a MK7 VW GTI. There may be minor differences depending on specific vehicle, market, options, etc.

Getting Started

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

customerservice@034motorsport.com


Note: Allow sufficient time for the vehicle to cool off before starting the installation.

Install Steps**Step 1**

Open your hood after the car has cooled off.


**Step 2**

Remove the engine cover by pulling upward.

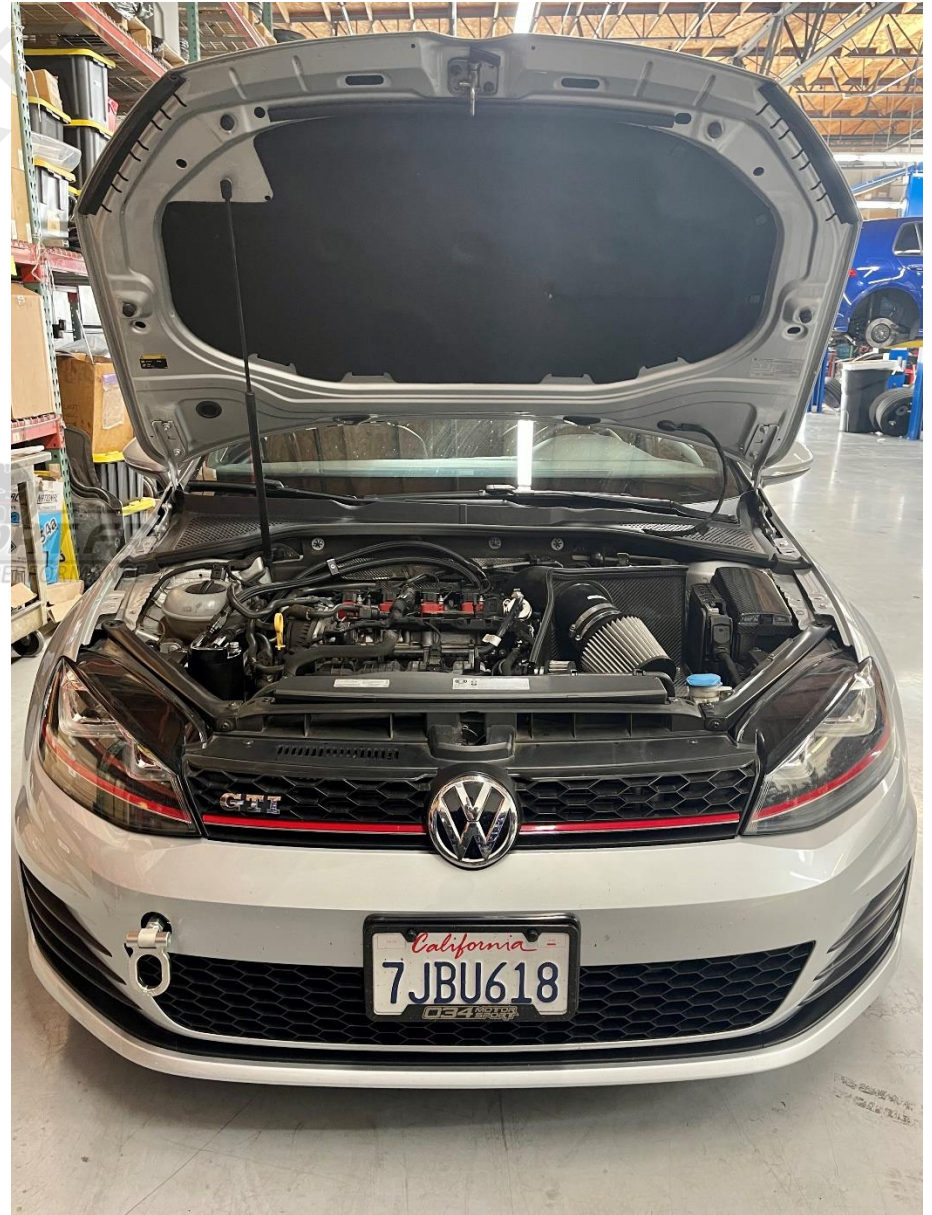

Step 3

Using a 32mm socket, remove the factory oil filter housing.

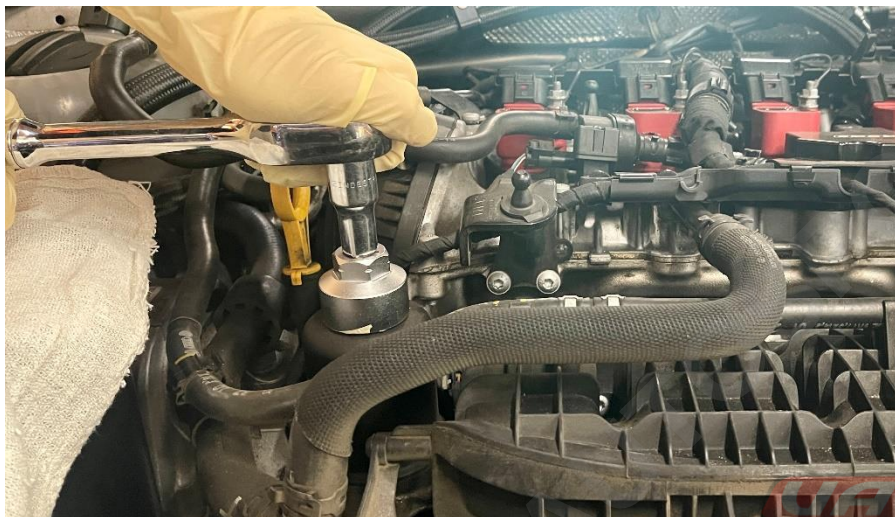

Step 4

Remove the oil filter from the housing. If you have the older version housing, be careful not to break the adapter valve.




Step 4 cont.

Here are both versions of the factory oil filter housings. Regardless of which one you have, the steps are the same.



Step 5

To remove the filter support tube, gently push it side to side.

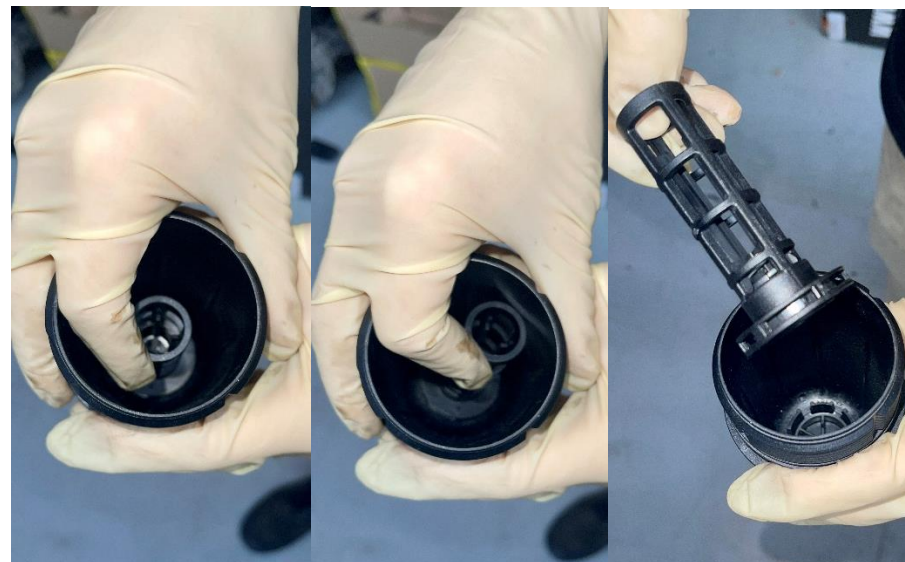

Step 5 cont.**Step 6**

Install the filter support tube in the 034 billet oil filter housing by lining up the clips with the slots and push down. It will make a nice clicking sound when it connects.

**Step 7**

Slide the oil filter over the filter support tube.



Step 8

Coat the o-ring with a small amount of oil to prevent tearing.

Step 9

Thread the 034 billet oil filter housing into the factory location.

**Step 10**

Using a 32mm socket, tighten the housing until snug.

**Step 11**

Torque the housing to **25Nm-30Nm**.

**Step 12**

Put the engine cover back on and you are done.

