



[Audi Q5/SQ5 3.0 TFSI Throttle Body Inlet Hose, High-Flow Silicone](#)



034 MOTORSPORT



Supplied Parts:

- 034Motorsport Audi Q5/SQ5 3.0 TFSI Throttle Body Inlet Hose
- 2 Hose Clamps

Tools Needed:


- Hands (2) (*Opposable thumbs are optional*)
- Flathead Screwdriver or 7mm Hose Clamp Driver
- Flat Pliers or Hose Clamp Pliers

034Motorsport is proud to offer our Silicone Throttle Body Inlet Hose for the Audi Q5/SQ5 3.0 TFSI Supercharged V6! This upgraded air intake hose is designed to replace the restrictive corrugated plastic unit and integrated intake silencer, and features a larger cross-sectional area and smooth insides for higher flow and increased performance.


Installation of this part can be accomplished with basic hand tools in less than 30 minutes using the instructions below. If you feel you are unable to install this hose safely, then please have the installation performed by a professional.

Step 1 – Pull the hood release latch inside the passenger compartment, then open the hood. Allow the engine compartment to cool off while enjoying a beverage of your choice. (You enjoy the beverage, not your engine compartment.)

Step 2 – Observe the stock throttle body inlet tube in its natural habitat. Notice that there are a few small hoses clipped on to it, which are kind of in the way. Unclip these hoses carefully.

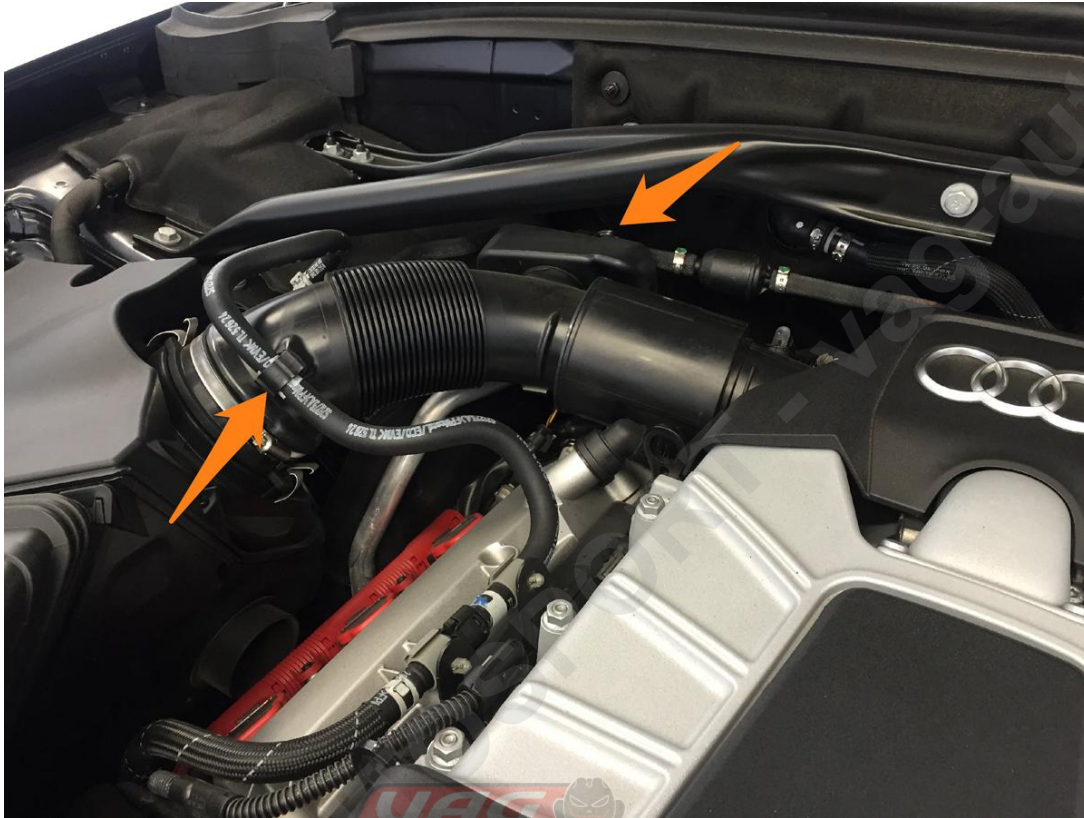

Step 3 – Carefully unhook the small vent hose near the throttle body. Twisting it on the barb may break it loose.

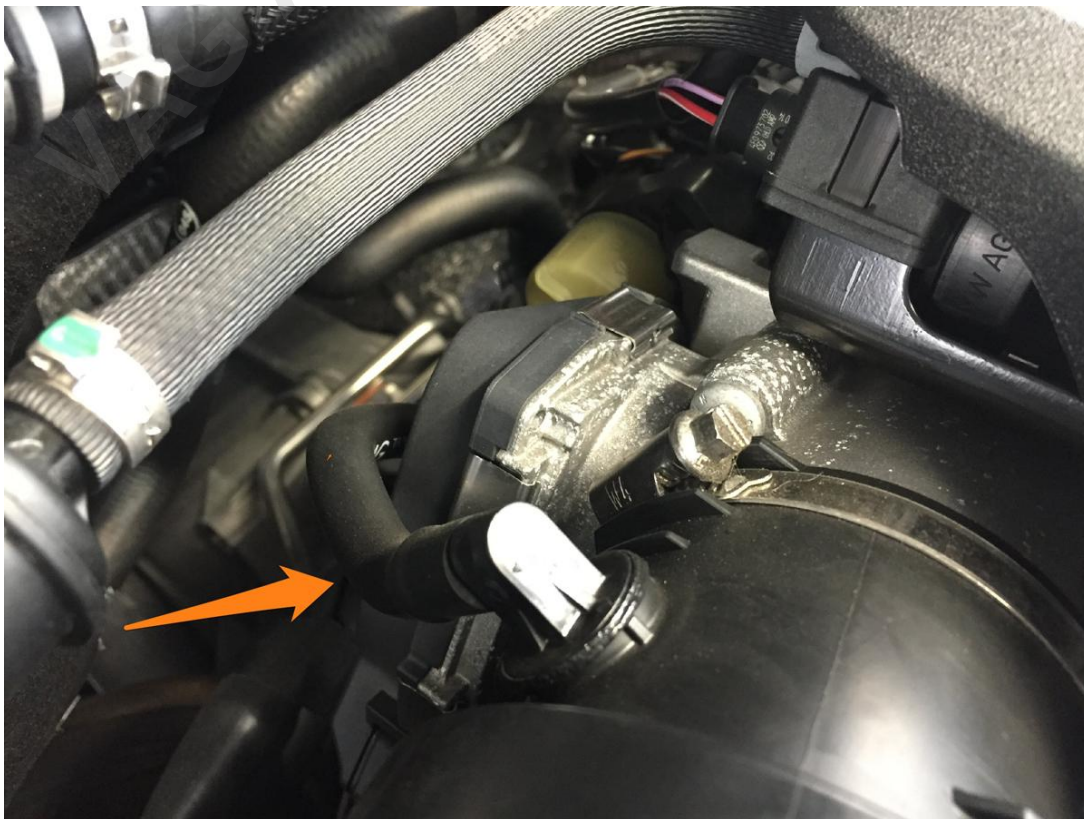

Step 4 – Using a hose clamp driver or flathead screwdriver, loosen the factory worm clamps at the throttle body and the airbox.



Step 5 – Remove the factory throttle body hose.



Step 6 – For maximum satisfaction, compare the factory throttle body hose to your new 034Motorsport High-Flow Silicone Throttle Body Inlet Hose. Point and laugh at the stock part for good measure.



Step 7 – Install the 034Motorsport High-Flow Silicone Throttle Body Inlet Hose and tighten the supplied clamps.



Step 8 – Reinstall the small vent hose onto the supplied barb.



Step 9 – You're all done! Marvel at your work, and enjoy the improved performance and enhanced intake sound.



VAG AUTOSPORT - vag-autosport

