

[Carbon Fiber Battery Cover](#)**034 MOTOR SPORT**

This high quality carbon fiber piece is designed to perfectly complement 034Motorsport's X34 Intake System, Engine Cover, and Fuse Box Cover for a true OEM+ engine bay appearance. The Carbon Fiber Battery Cover fits snugly over the factory battery blanket and is secured by magnets.

Installation Spiciness Rating: MILD

Installation of your 034Motorsport Carbon Fiber Battery Cover is a straightforward process that will take approximately 30 minutes to complete.

Supplied Parts:

- 034Motorsport Carbon Fiber Battery Cover
- Powder coated Steel Backing Plate
- (2x) Plastic Rivets

Tools Needed:

- Tape measure
- Wire clippers
- Sharp/Pointy tool

[About This Guide](#)

This Install Guide documents the installation process on a Mk7 VW Golf R. There may be minor differences depending on specific vehicle, market, options, etc.

Getting Started

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

customerservice@034motorsport.com

Install Steps

Step 1

Open your hood to access the battery.

Step 2

Open the box for the 034Motorsport Carbon Fiber Battery Cover and locate the plastic bag containing the backing plate and plastic rivets.




Step 3

Measure 5.125" from the back of the battery to position the supplied backing plate correctly. **Important:** Measure from the back of the battery, not the back of the battery blanket!



Step 4

With the backing plate properly located, use a Sharp/Pointy Object to pierce two holes in the factory battery blanket.

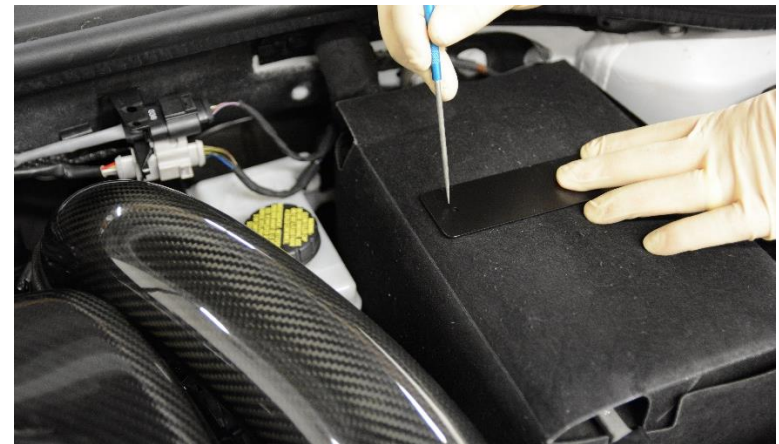

Step 5

Insert the plastic rivets through the backing plate and factory battery blanket.

**Step 6**

Secure both plastic rivets with the supplied clips.

**Step 7**

Ensure that the rivets are properly secured.




Step 8

Trim the ends of the plastic rivets using wire cutters.

**Step 9**

Reinstall the battery blanket.

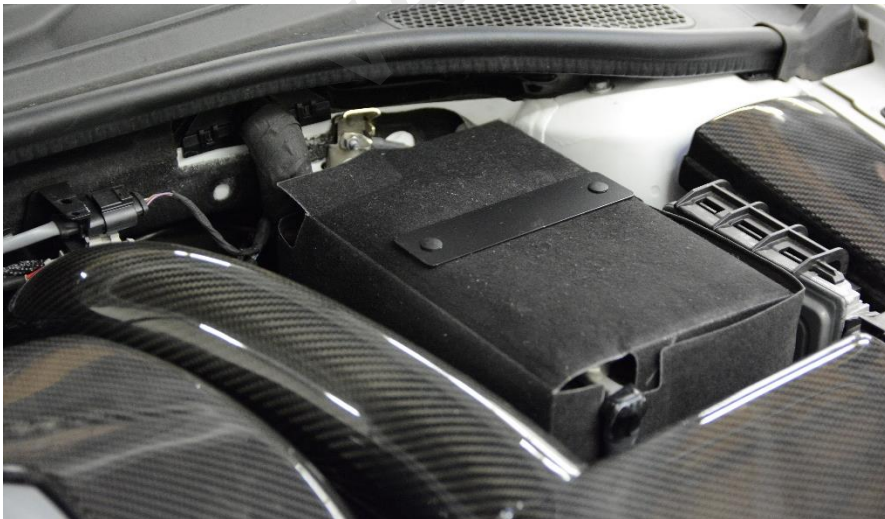**Step 10**

Properly orient the Carbon Fiber Battery Cover. **Important:** Ensure that there no exposed terminals or wires.

**Step 11**

Carefully slip the Carbon Fiber Battery Cover into position over the battery blanket.



Step 12

Let the magnets do the rest. Marvel at your work!

