

**B5-6-7-C5 Front End Link Rebuild Kit****034 MOTORSPORT**

034Motorsport's Billet Aluminum Spherical Front Sway Bar End Links allow for uncompromised transfer of suspension movement to the sway bar. 034Motorsport sway bar end links are the only spherical options on the market designed specifically for Audi applications, ensuring that the sphericals do not bind as the suspension articulates.

**Installation Spiciness Rating: MILD**

Rebuilding your Front End Links is a straightforward process that should take approximately 30 minutes to complete.

**Supplied Parts:**

- (4x) 034 Spherical Bearings
- (4x) 034 End Link Spacers
- (2x) M10x65mm Bolts
- (2x) M10x55mm Bolts
- (2x) M10x50mm Bolts
- (4x) M10 Nuts
- (4x) M10 Washers

**Tools Needed:**

- Circlip Pliers
- 18mm Socket
- 13mm Socket
- Arbor Press
- Green Loc-Tite
- Safety glasses

**Getting Started**

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

[customerservice@034motorsport.com](mailto:customerservice@034motorsport.com)

### About This Guide

This Rebuild Guide documents the process of refreshing the serviceable parts in your 034Motorsport front sway bar end links. Please [remove](#) them from the car before moving forward.

### Install Steps

#### **Step 1**

Using a pair of circlip pliers and safety glasses, carefully remove the circlip that's retaining the bearing.



#### **Step 2**

Position the end link under the arbor press such that the bearing can be pushed out, downward. Using a 13mm socket, carefully press the bearing out.



#### **Step 3**

Thoroughly clean the bore where the old bearing was secured.



**Step 4**

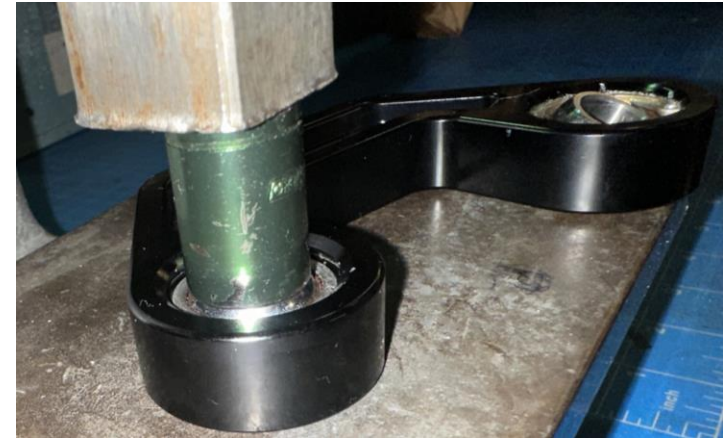
Apply a small amount of green Loctite to the outside of the bearing. Don't get any in the seal between the ball and the housing.

**Step 5**

Push the bearing into the bore, checking your alignment.

**Step 6**

Using the 13mm socket and arbor press, fully install the bearing into the endlink.

**Step 7**

Using a pair of circlip pliers and safety glasses, carefully reinstall the circlip into the retaining groove.



**Step 8**

Using an 18mm socket and the arbor press, gently press down on the circlip to ensure that it's fully seated. You should hear it click into place.

**Step 9**

You are ready to reinstall your rebuilt 034Motorsport front end links. Enjoy!

