

MQB Magnetic Haldex Plug Set**034 MOTORSPORT**

034Motorsports new magnetic differential sump plugs are CNC machined from 304 stainless steel. These are a direct replacement, designed to fit perfectly. The permanently mounted Neodymium magnet will remove any ferrous debris circulating through the lubrication system to help ensure a long life from your AWD transmission.

Installation Spiciness Rating: MILD

Installation of your 034Motorsport Magnetic Haldex Plug Kit is a straightforward process that will take approximately 30 minutes to complete.

Supplied Parts:

- (1x) 034 Magnetic Drain Plug
- (1x) 034 Fill Plug
- (2x) Copper crush washers

Tools Needed:

- 13mm Socket
- 12mm Socket
- 8mm Allen
- 5mm Allen
- Drain tray

Getting Started

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

customerservice@034motorsport.com

About This Guide

This Install Guide documents the installation process on a MK7 VW Golf R. There may be minor differences depending on specific vehicle, market, options, etc.

Install Steps


Step 1

Lift the car to access the underside of the car.



Step 2

Locate both the fill and drain plugs for the Haldex AWD on the rear differential.

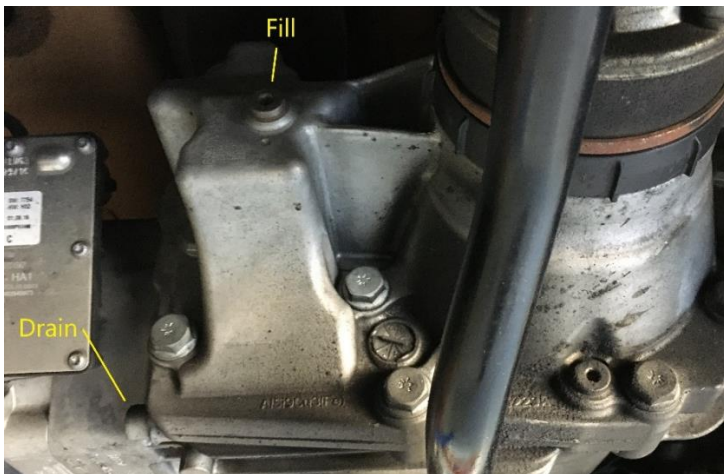

Step 3


Using a 5mm Allen bit, remove drain plug. The fill plug will require an 8mm Allen for removal.

Step 4

Drain the oil from the rear differential into a collection tray.

Step 5

Using a 13mm socket, install the drain plug with a copper washer. **Torque to 32Nm.**

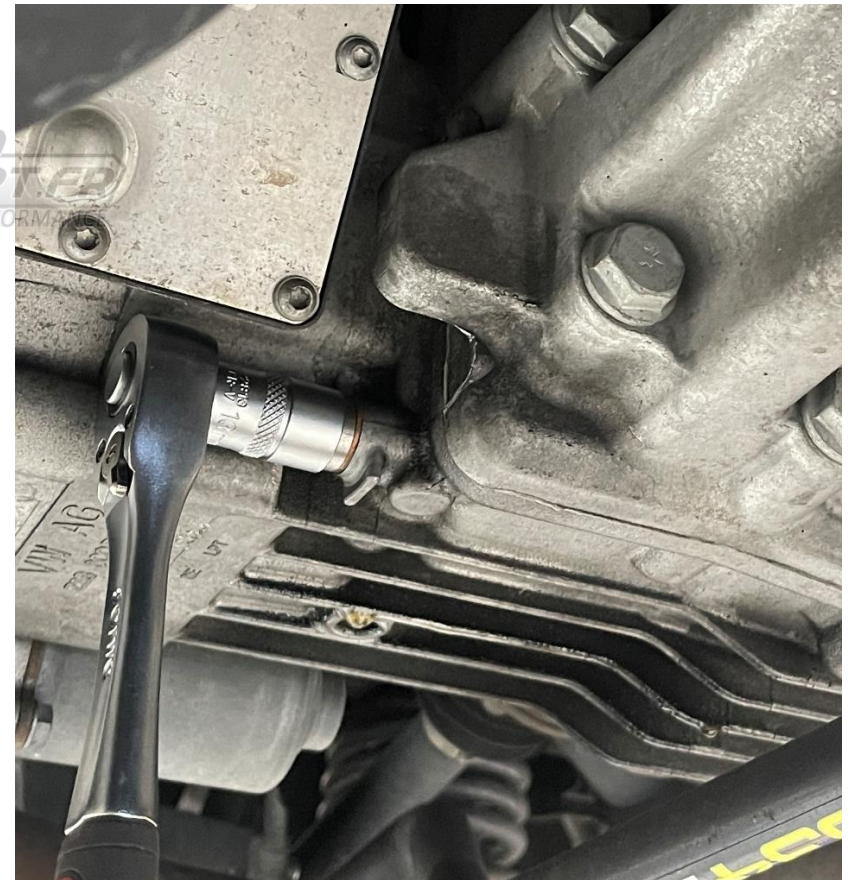

Step 6

Add oil back into the rear differential.

Step 7

Using a 13mm socket, install the fill plug with a copper washer. **Torque to 19Nm.**

**Step 8**

Lower the car back down and you are good to go.

