

[Insert link here](#)

**034 MOTORSPORT**

034Motorsports new magnetic differential sump plugs are CNC machined from 304 stainless steel. These are a direct replacement designed to fit perfectly. The permanently mounted Neodymium magnet will remove any ferrous debris circulating through the lubrication system to help ensure a long life from your differential.

Installation Spiciness Rating: MILD



Installation of your 034Motorsport Magnetic Diff Sump Plug Kit is a straightforward process that will take approximately 30 minutes to complete.

Supplied Parts:

- (1x) 034 Magnetic Drain Plug
- (1x) 034 Fill Plug
- (2x) Copper crush washers

Tools Needed:

- 13mm Socket
- 5mm Allen
- Drain tray

Getting Started

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:


customerservice@034motorsport.com

About This Guide

This Install Guide documents the installation process on a MK7 VW GTI. There may be minor differences depending on specific vehicle, market, options, etc.

Install Steps**Step 1**

Lift the car to access the underside of the car.

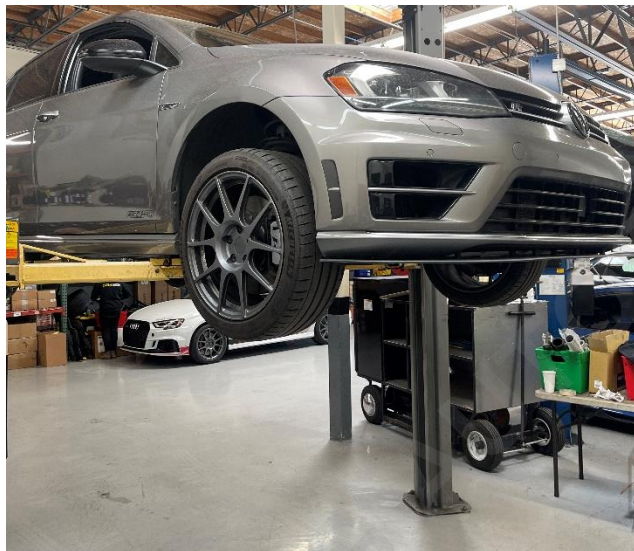**Step 2**

Locate both the gear oil fill and drain plugs on the rear differential.

**Step 3**


Using a 5mm Allen bit, remove both plugs.

Step 4

Drain the gear oil from the rear differential into a collection tray.

Step 5

Using a 12mm socket, install the drain plug with a copper washer. **Torque to 19Nm.**

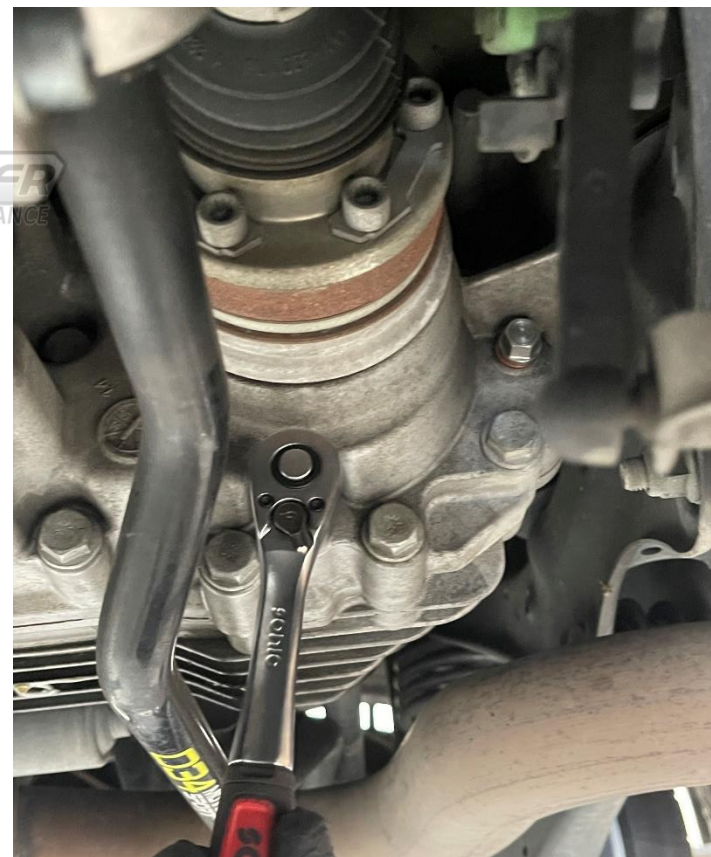

Step 6

Add gear oil back into the rear differential.

Step 7

Using a 13mm socket, install the fill plug with a copper washer. **Torque to 19Nm.**

**Step 8**

Lower the car back down and you are good to go.

