

[Billet Aluminum Dogbone Mount Insert for Early \(Up to 2008.5\) MkV Volkswagen Golf/Jetta/GTI/GLI & 8J/8P Audi TT/A3](#)



034 MOTORSPORT

This precision-machined billet aluminum insert is designed to fill the large voids in the factory dogbone mount, and limit transmission and engine movement without sacrificing ride quality or introducing any perceivable additional noise, vibration, or harshness into the cabin.

Installation Spiciness Rating



(Mild)

Installation of this part is a straightforward process that will take approximately 30-45 minutes to complete.

Supplied Parts:

- 034Motorsport Billet Aluminum Early MkV Dogbone Mount Insert

Tools Needed:

- 21mm socket
- Torque wrench

Getting Started


Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact customerservice@034motorsport.com

About This Guide

This Install Guide documents the installation process of 034Motorsport's Dogbone Mount Insert in an 8J Audi A3. There may be other minor differences with your vehicle depending on specific vehicle, market, options, etc.

Step 1

Raise the vehicle securely on jackstands, ramps, or a lift, in order to gain access to dogbone mount bushing in the front subframe. Locate the 21mm bolt securing the two halves to the factory torque arm.

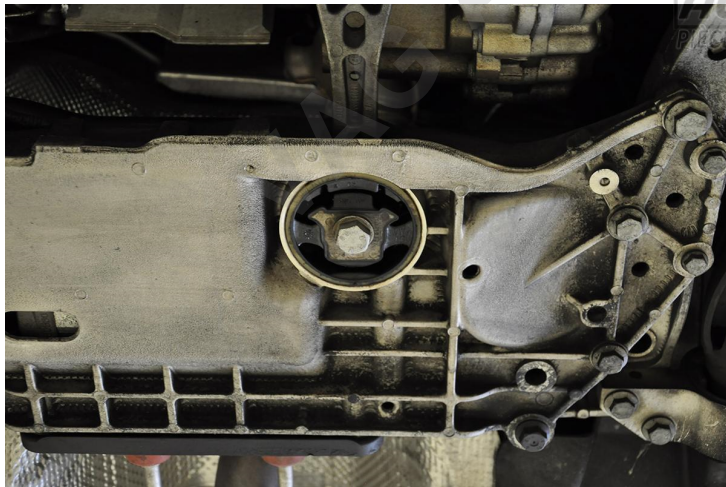

Step 2

Using a 21mm socket, remove the factory bolt completely in order to install the 034Motorsport Dogbone Mount Insert.



Step 3

With the factory bolt removed, you can install the Billet Aluminum Dogbone Mount Insert into the voids. It should be positioned with the 034Motorsport logo towards the front of the car.

**Step 4**

Reinstall the factory dogbone mount bolt. Torque to 100 Nm.

**Step 5**

You're done! Enjoy crisper, faster shifting, improved throttle response, and harder launches!