

#TL100178

INSTALLATION MANUAL

CI100020-A

APR Secondary Air Filter



APR



VAG AUTOSPORT



Notes:

These instructions were written for any car with Secondary Air Injection (SAI), typically found in the North American region. If the vehicle is equipped with SAI, it is required that this filter is used.

When disassembling the car, be sure to keep all fasteners so they can be reused. It is recommended that you get some kind of compartmented tray to organize the fasteners, such as a fishing tackle box or several large ice cube trays. Fasteners that are not reused for reinstallation are noted in the instructions. All directions used in this manual (right, left, front, etc.) are based on if you were sitting in the drivers seat of the car.


These instructions assume that you have basic mechanical skills and several varieties of basic hand tools in order to install the kit. If you have any questions about the install, feel free to contact your APR representative.



WWW.GOAPR.COM

4800 US HWY 280 West Opelika Alabama 36801

TL100178

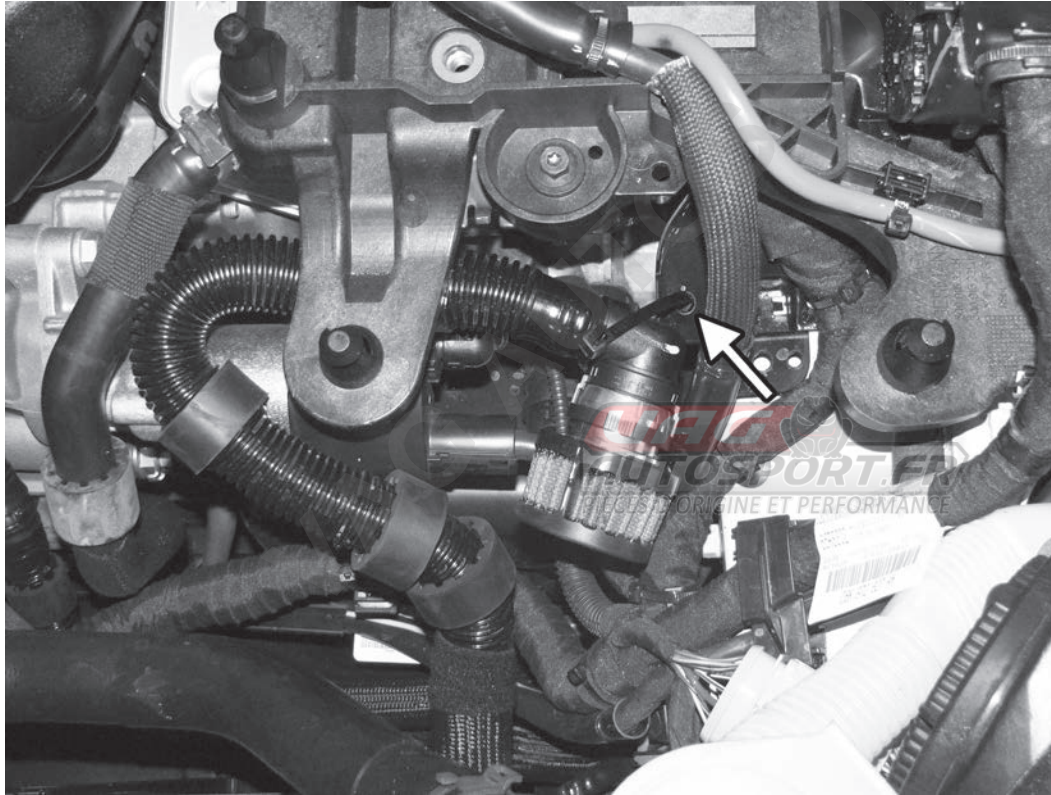

1) Clip the APR secondary air filter into the factory fitting on the end of the secondary air pipe. Bend the pipe to tuck it out of the way and secure it with the supplied cable ties.

APR

2) Once the APR intake is installed, be sure to clean a visible location under the hood and affix the supplied sticker in order to aid inspection of the vehicle under the California Smog Check program.

4800 US HWY 280 W. OPELIKA, AL 36801

APR

VAG
AUTOSPORT
PIÈCES D'ORIGINE ET PERFORMANCE

AIR INTAKE SYSTEM

CARB

D-783-2

TL100178

VAG AUTOSPORT



APR

VAG AUTOSPORT



TL100178

#TL100178

VAG AUTOSPORT



GO APR.COM