

#TL100045

CI100033

APR MQB Intake



INSTALLATION MANUAL

APR



VAG AUTOSPORT



Notes:

These instructions were written for a North American specification Mk7 GTI, but other models, like the Mk7 GLI, Golf R. and Audi A3/S3 are similar. If installing on a car with a Mass Air Flow sensor (MAF), like some A3's or Tiguan's with a EA888-3B, you will also need CI100051, sold separately.

When disassembling the car, be sure to keep all fasteners so they can be reused. It is recommend that you get some kind of compartmented tray to organize the fasteners, such as a fishing tackle box or several large ice cube trays. Fasteners that are not reused for reinstallation are noted in the instructions. All directions used in this manual (right, left, front, etc.) are based on if you were sitting in the drivers seat of the car.


These instructions assume that you have basic mechanical skills and several varieties of basic hand tools in order to install the kit. If you have any questions about the install, feel free to contact your APR representative.



WWW.GOAPR.COM


4800 US HWY 280 West Opelika Alabama 36801

TL100045

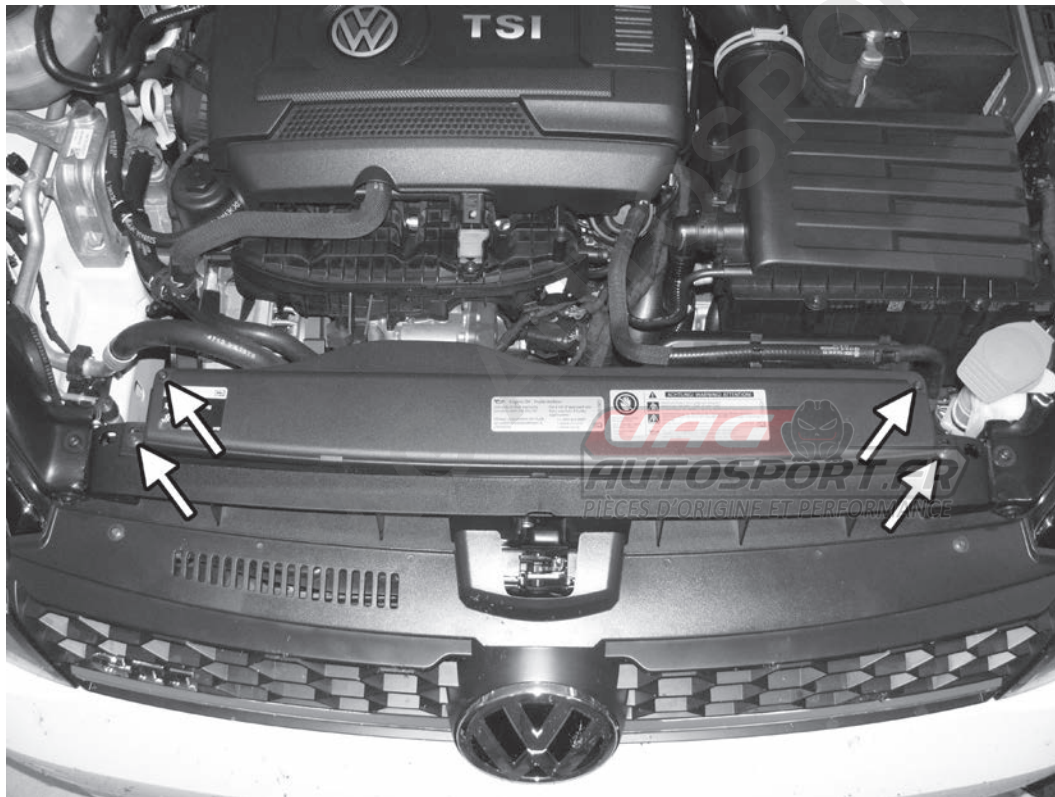


1) Remove the four T25 screws that hold the top cover of the factory air scoop.

2) Lift up on the clip located on the back of the air scoop cover, and remove the cover from the car.

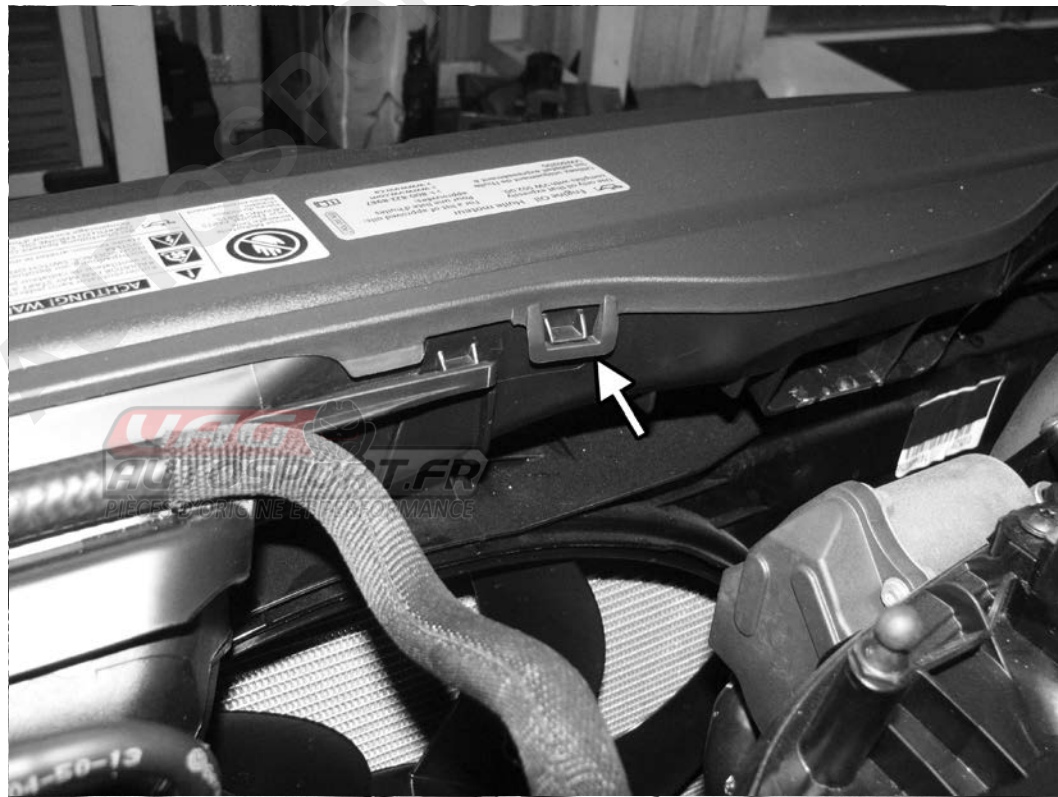

TL100045

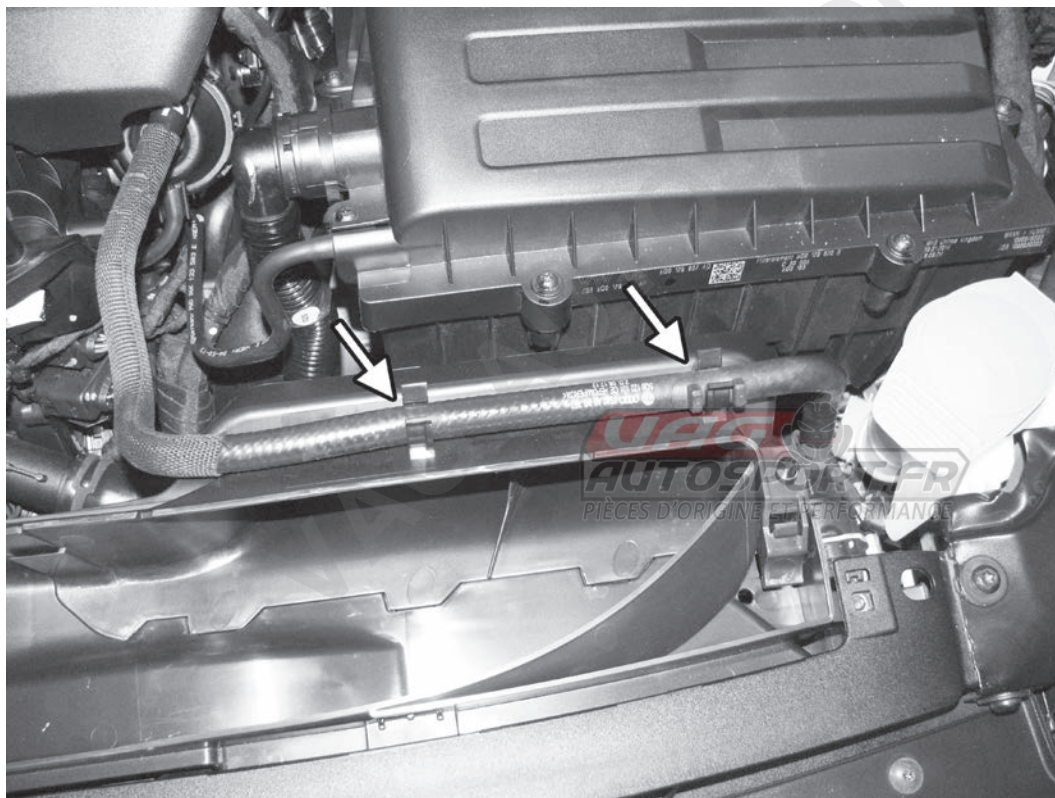


3) Carefully unclip the heater hose from the two tabs on top of the air scoop.

4) Lift up on the tab on the left side of the air scoop to release the connection to the airbox inlet.



TL100045

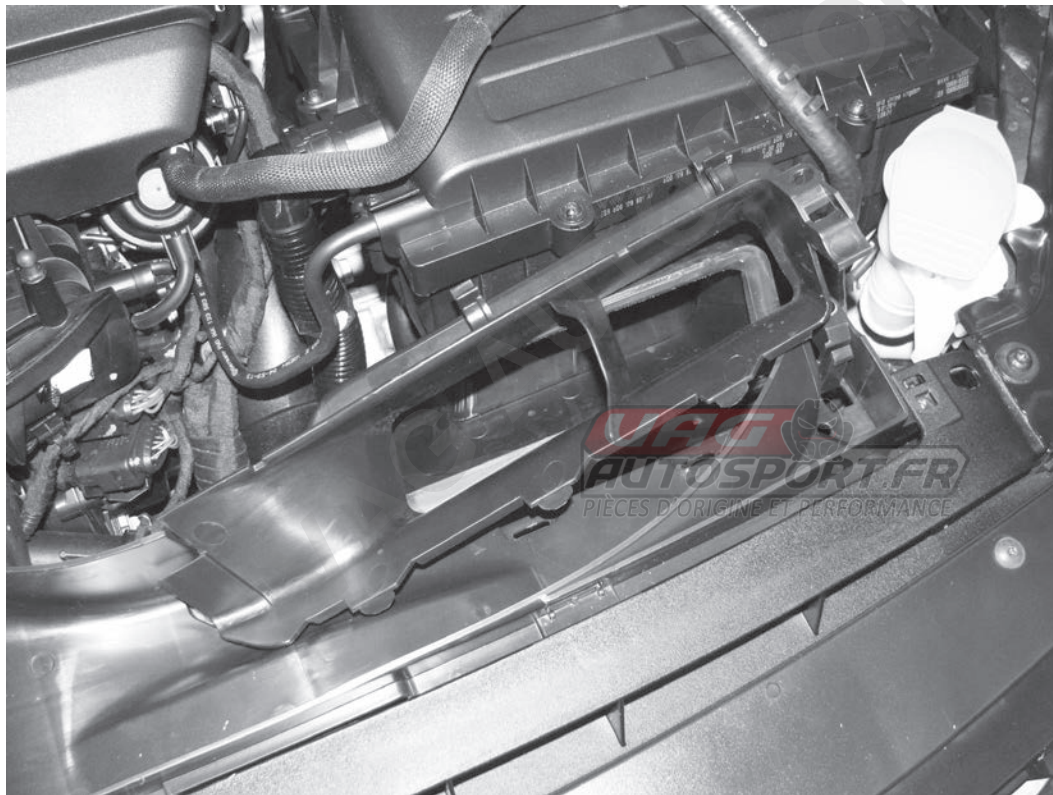


5) Lift the connection to the airbox inlet and remove this piece from the car.

6) Push down on the tabs on both sides of the factory air scoop bottom and remove this from the car.



TL100045

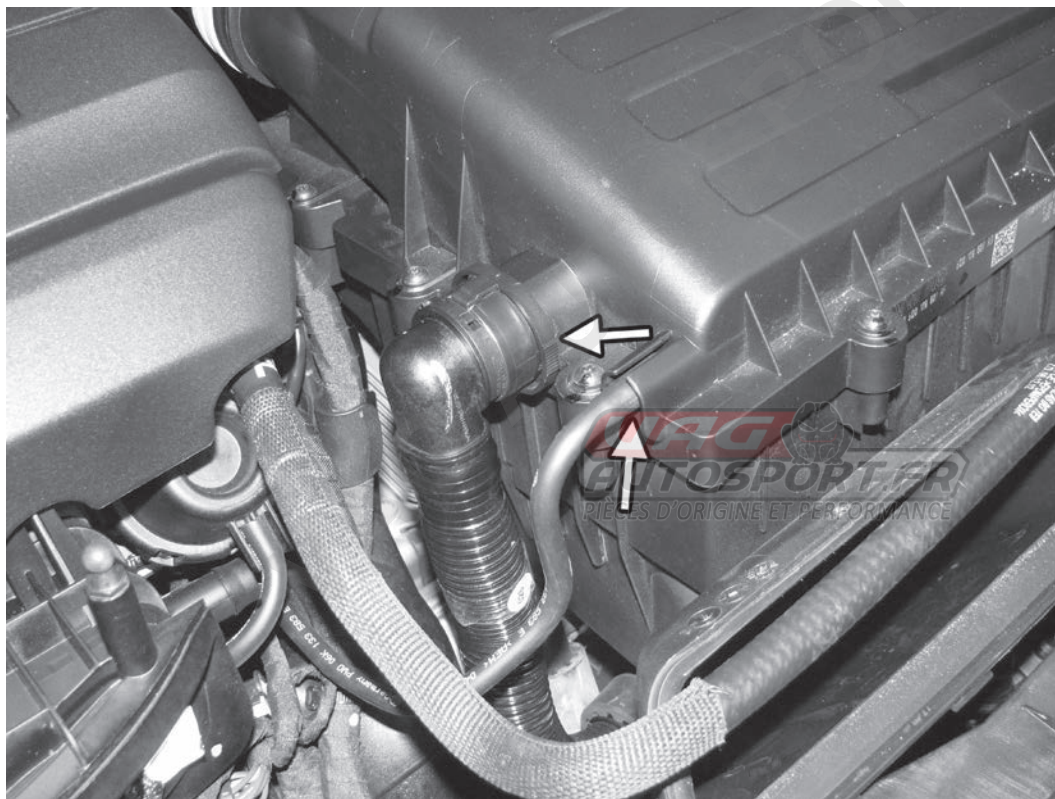


7) Remove the vacuum line from the front right corner of the factory airbox by pulling it off. Then, if equipped, remove the connection to the secondary air pipe by pressing down on both sides of the fitting and pulling away from the airbox.

8) Loosen the spring clip that holds the factory inlet tube to the factory airbox, and slide the inlet tube off the airbox.




TL100045

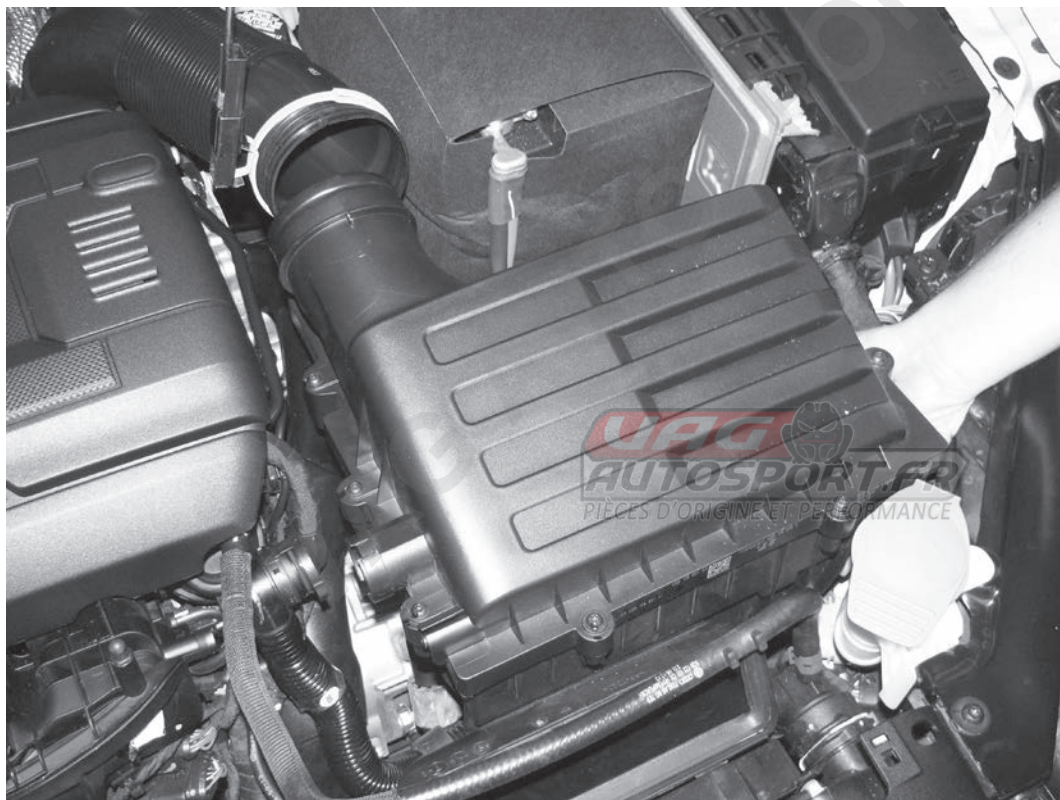


9) Carefully but forcefully lift up on all sides of the factory airbox. The airbox is mounted on three rubber posts underneath, and these must be popped off to remove the airbox from the car.

APR

10) If equipped with Secondary Air Injection, install CI100020-A (sold separately) by snapping the filter to the factory fitting on the secondary air pipe. Bend the pipe down to tuck it out of the way and secure it with a cable tie.

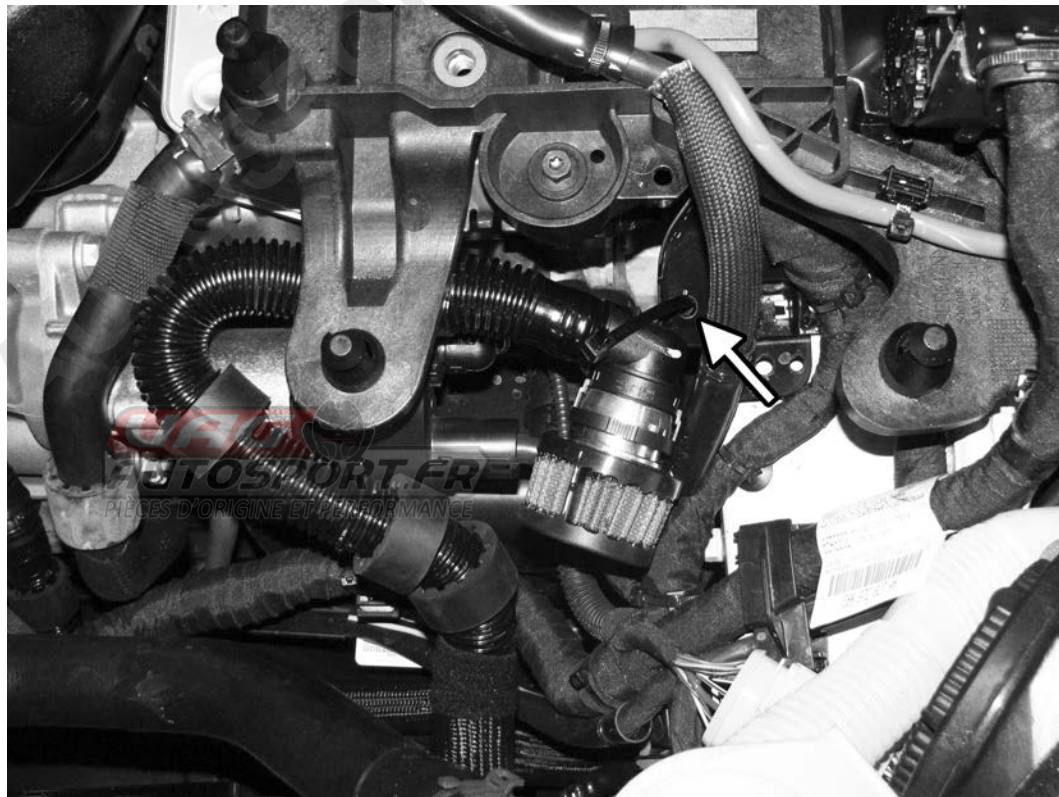


TL100045

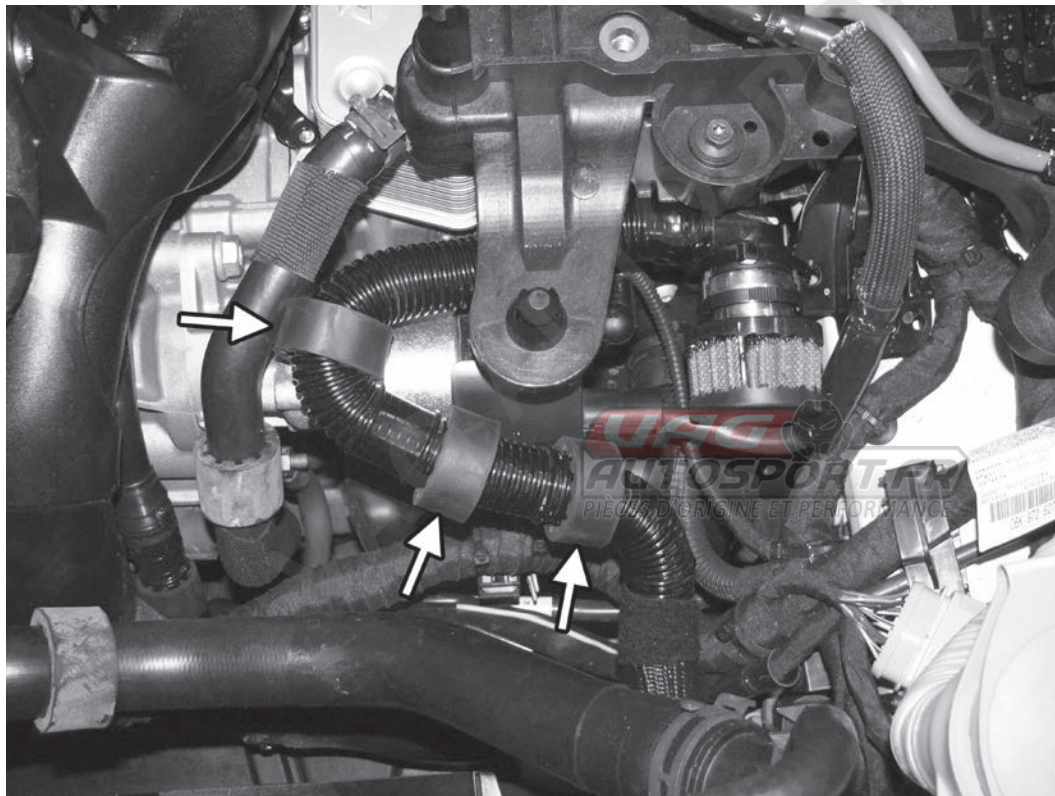


11) If equipped, adjust the three factory rubber bumpers on the secondary air pipe to keep the pipe from rubbing on the engine starter.

APR

12) Locate the supplied rubber mounting grommet which will either be in the box or located on the bottom of the APR intake. Install this rubber grommet on the front mounting post of the factory airbox mounting bracket.

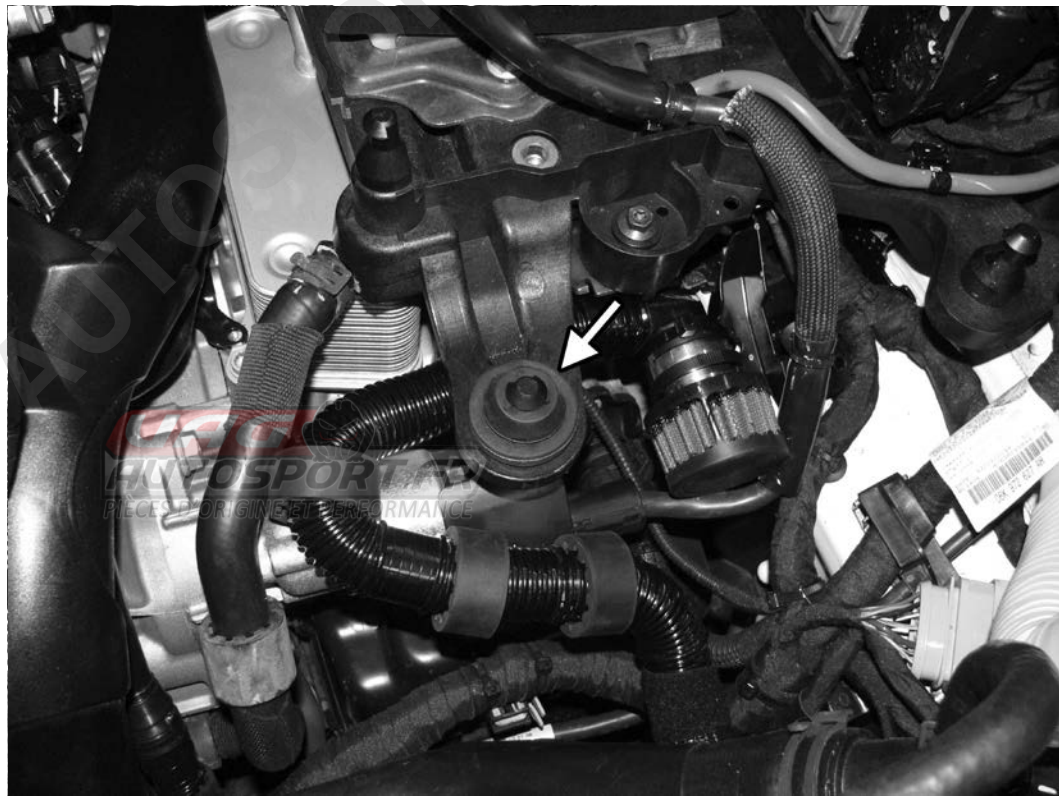

TL100045

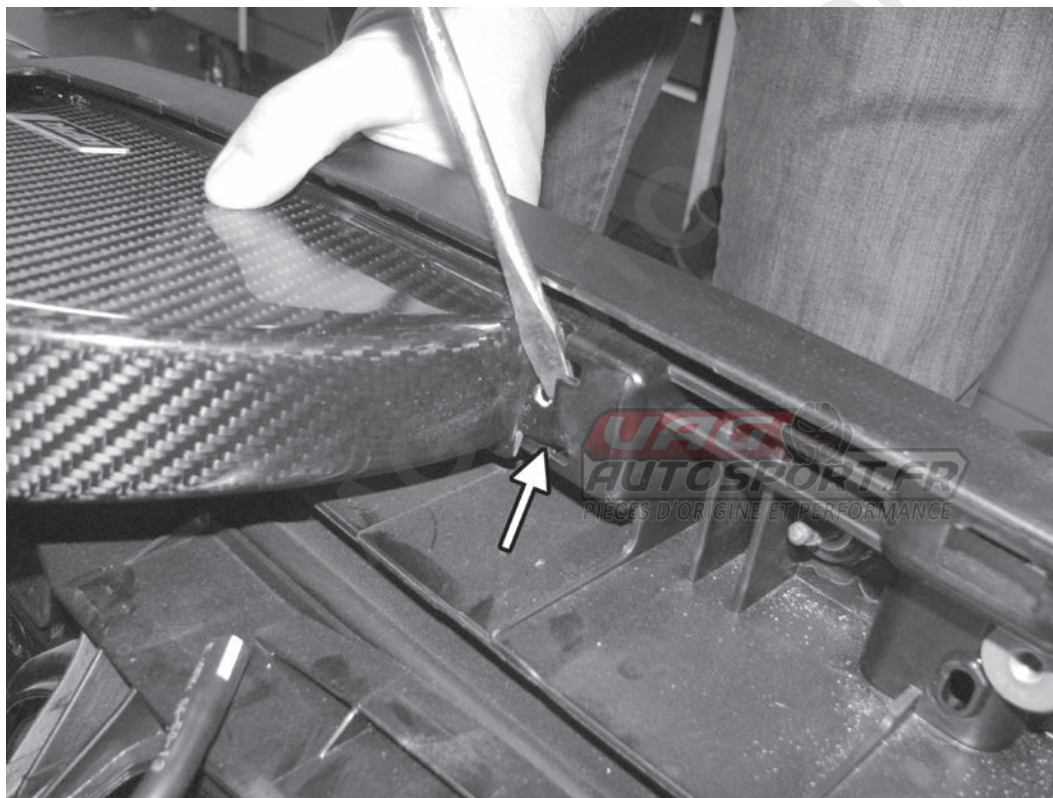


13) Loosely place the APR intake in the car. Slide the right mounting tab of the intake underneath the mounting point on the back of the factory radiator support. It may be necessary to carefully pry the factory tab back for the APR intake to fit. Once in place, slide the entire APR intake to the right side of the car to lock it in place.

APR

14) Install the supplied T25 screw to the left side of the APR intake, securing it to the hole on the back of the factory radiator core support.



TL100045

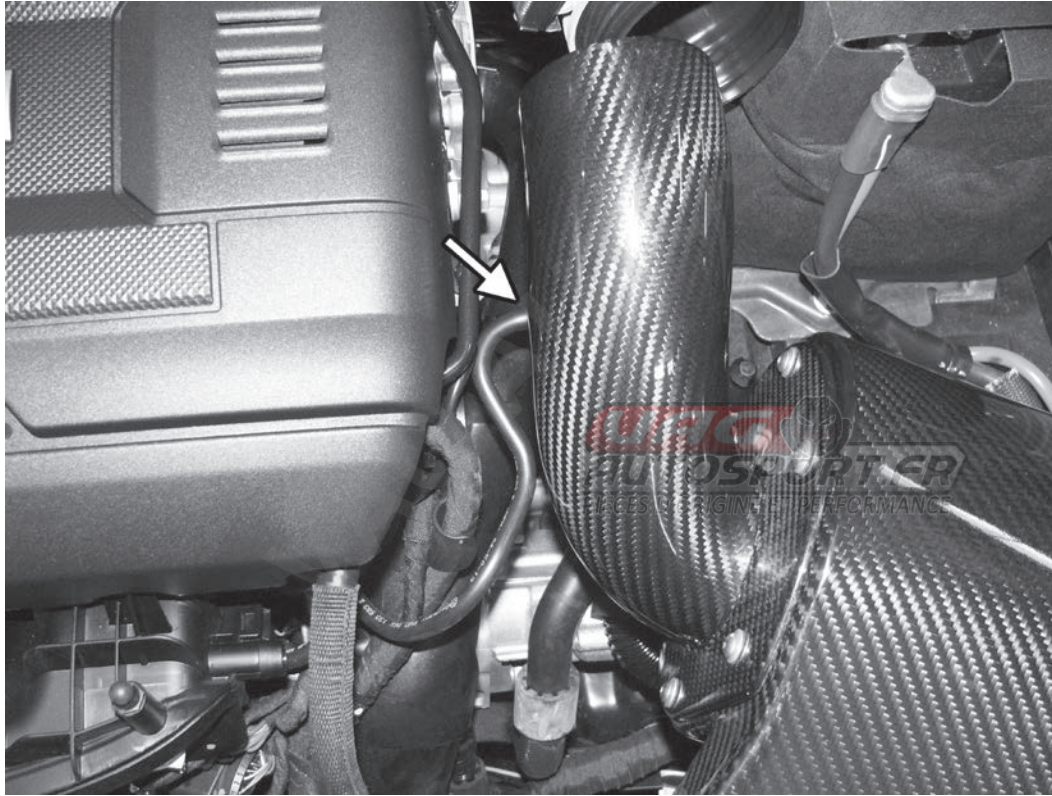

15) Connect the vacuum line that was on the right side of the factory airbox to the vacuum port on the bottom of the APR intake tube.

APR

16) Reattach the factory intake tube to the back of the APR intake, and secure with the factory spring clamp.



TL100045



17) Once the APR intake is installed, be sure to clean a visible location under the hood and affix the supplied sticker in order to aid inspection of the vehicle under the California Smog Check program.

VAG AUTOSPORT



TL100045

#TL100045

VAG AUTOSPORT



GO APR.COM