

CTSTURBO

INSTALLATION GUIDE

8V Audi RS3
DSG Catch Can



20630 Mufford Crescent, Unit #309
Langley, British Columbia V2Y 2V9

www.CTSTURBO.com

WHAT IS INCLUDED

1. CTS catch can overflow housing
2. Hardware



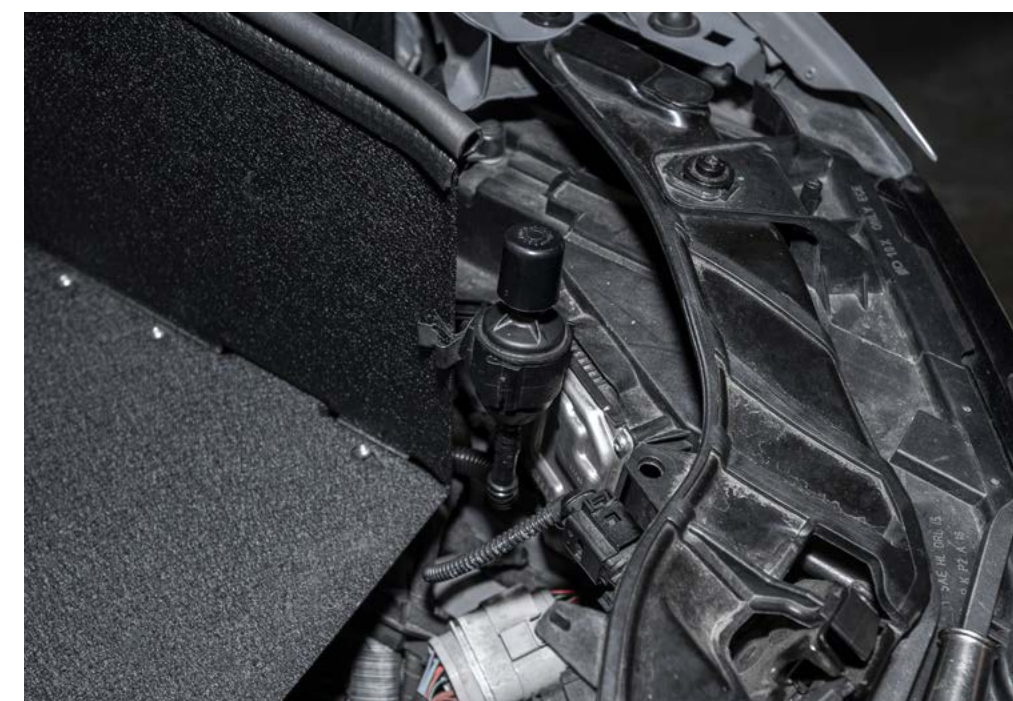
STEP 1

Remove the air intake.



STEP 2

Unclip the factory vent tube and housing from the heat shield.



NOTES

Vehicle used in this guide is a 2018 Audi RS3. Always make sure the car is safe to work on. Do not work on the car until it has cooled down. We do not accept any liability for incorrect installation or damage during the install.

STEP 3

Remove the heat shield

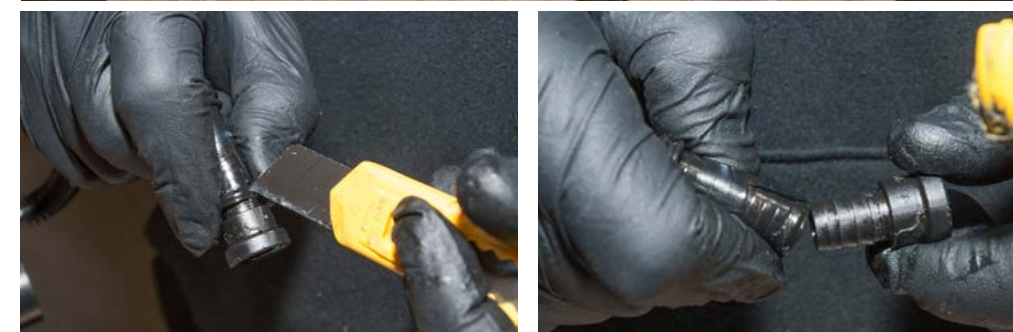
**STEP 4**

Locate the factory vent tube where it connects to the vent port near the transmission oil cooler and remove.

**STEP 5**

With a razor blade, carefully cut the plastic tubing that was attached to the transmission.

The fitting will be reused.

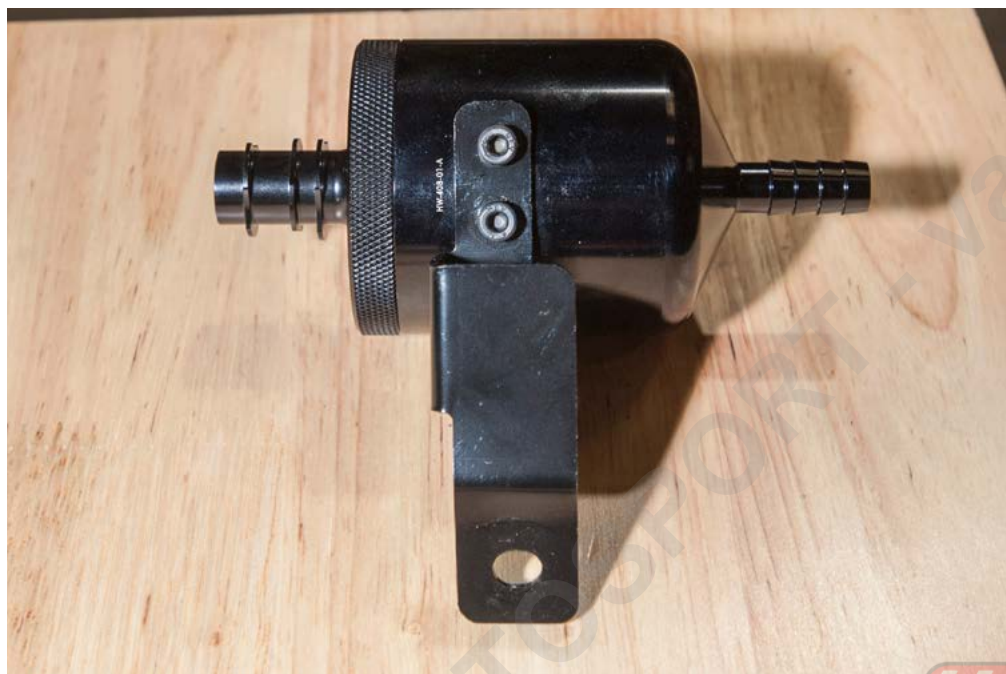
**STEP 6**

Install the fitting we just cut from the plastic tube and install into the provided hose.



STEP 7

Assemble the CTS DSG catch can housing and bracket.

**STEP 9**

At the positive terminal loosen the bolt and install the CTS DSG catch can.

**STEP 8**

Remove the factory cap from the factory vent housing.

Install on to the CTS DSG catch can.

At this time you can connect the other end of the provided hose to the catch can.



UAG
AUTOSPORT.FR
PIÈCES D'ORIGINE ET PERFORMANCE



STEP 10

Run the CTS catch can hose under the brake booster (if you have one).

Install the fitting onto the transmission vent port.



STEP 11

Reinstall the intake and you are done.



VAG
AUTOSPORT.FR
PIÈCES D'ORIGINE ET PERFORMANCE

