



INSTALLATION GUIDE

CTS Turbo Audi 8V RS3 2.5T
Throttle Pipe
CTS-IT-258



20630 Mufford Crescent, Unit #309
Langley, British Columbia V2Y 2V9

www.CTSTURBO.com

WHAT IS INCLUDED

1. CTS Turbo Throttle Pipe

1.**TOOLS REQUIRED**

1. 7mm throttle
2. Ratchet
4. Socket extension
5. Pliers

**NOTES**

Vehicle used in this guide is a 2017 Audi RS3. Always make sure the car is safe to work on. Do not work on a hot motor. We do not accept any liability for incorrect installation or damage during the install.

STEP 1

Begin by raising the car up to gain access to the bottom.

Remove the belly pan


**STEP 2**

Undo the hose clamp at the bottom of the stock throttle pipe.



STEP 3

Unscrew the two T25 screws on either side of the air inlet

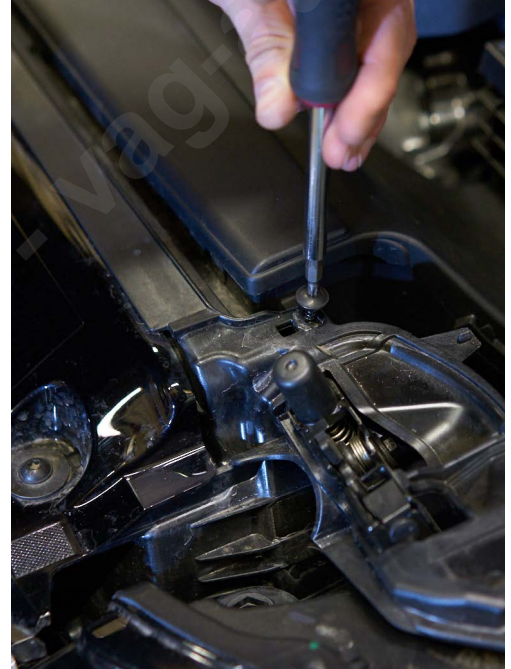

WAG
AUTOSPORT.FR
PIÈCES D'ORIGINE ET PERFORMANCE

STEP 4

Remove the air inlet by pushing in and lifting up to gain access to the top of the throttle pipe.



STEP 5

locate the top of the stock throttle pipe and undo the lower

**STEP 6**

Remove the nut securing the stock throttle pipe to the car.

You should now be able to remove the stock throttle pipe from the engine bay.



STEP 7

Confirm the orientation of the throttle pipe and install the CTS Throttle pipe from steps 1 to 7 in reverse.



VAG
AUTOSPORT.FR
PIÈCES D'ORIGINE ET PERFORMANCE