

CTSTURBO

INSTALLATION GUIDE

CTS Turbo Audi 8V RS3 2.5T
EA855 Turbo Outlet Pipe
CTS-IT-259



20630 Mufford Crescent, Unit #309
Langley, British Columbia V2Y 2V9

www.CTSTURBO.com

WHAT IS INCLUDED

1. CTS Turbo Throttle Pipe

**TOOLS REQUIRED**

1. 10mm Triple square
2. T30 Torx
3. Ratchet
4. Socket extension
5. Pliers

**NOTES**

Vehicle used in this guide is a 2017 Audi RS3. Always make sure the car is safe to work on. Do not work on a hot motor. We do not accept any liability for incorrect installation or damage during the install.

STEP 1

Begin by raising the car up to gain access to the bottom.

Remove the belly pan

**STEP 2**

Use a T30 torx to release the bottom end of the stock turbo outlet pipe.




STEP 3

Remove the bolt at the top of the turbo outlet pipe using a 10mm triple square.

**STEP 4**

Undo the hose clamp at the end of the silicone connector closest to the turbo

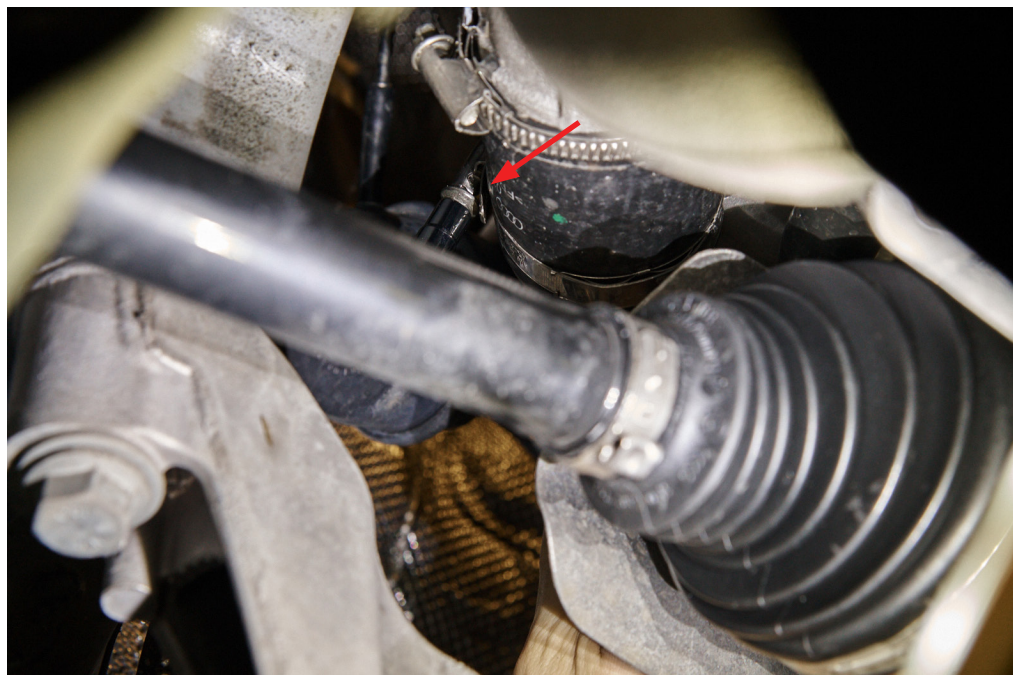

STEP 5

You should now be able to take the stock turbo outlet pipe from the engine bay.

**STEP 6**

Transfer to stock silicone connector to the CTS Turbo Outlet Pipe and secure with the hose clamp.



STEP 7

Install the CTS pipe and secure the top and bottom using the hose clamps and secure the pipe in the centre with the 10mm triple square you removed earlier.



VAG
AUTOSPORT.FR
PIÈCES D'ORIGINE ET PERFORMANCE