

# Install Throttle Pipe

VAG AUTOSPORT - vag-autosport



604.530.3092  
[www.ctsturbo.com](http://www.ctsturbo.com)  
#309-20630 Mufford Cre. Langley

**Step 1** - Remove the belly pan T25



**VAGALCS**  
**AUTOSPORT.FR**  
PIÈCES D'ORIGINE ET PERFORMANCE



**Step 2** - Loosen silicon from the pipe 7mm



**Step 3** - Remove silicon



**Step 4** - Unclip the coolant hose



**VAG**  
**AUTOSPORT.FR**  
PIÈCES D'ORIGINE ET PERFORMANCE

VAG ALTOUR VAG AUTOSPORT

**Step 5** - Undo both brackets T30




**Step 6 - Unclip the map sensor**



**VAG**  
**AUTOSPORT.FR**  
PIÈCES D'ORIGINE ET PERFORMANCE

**Step 7 - Undo the silicon from throttle body**

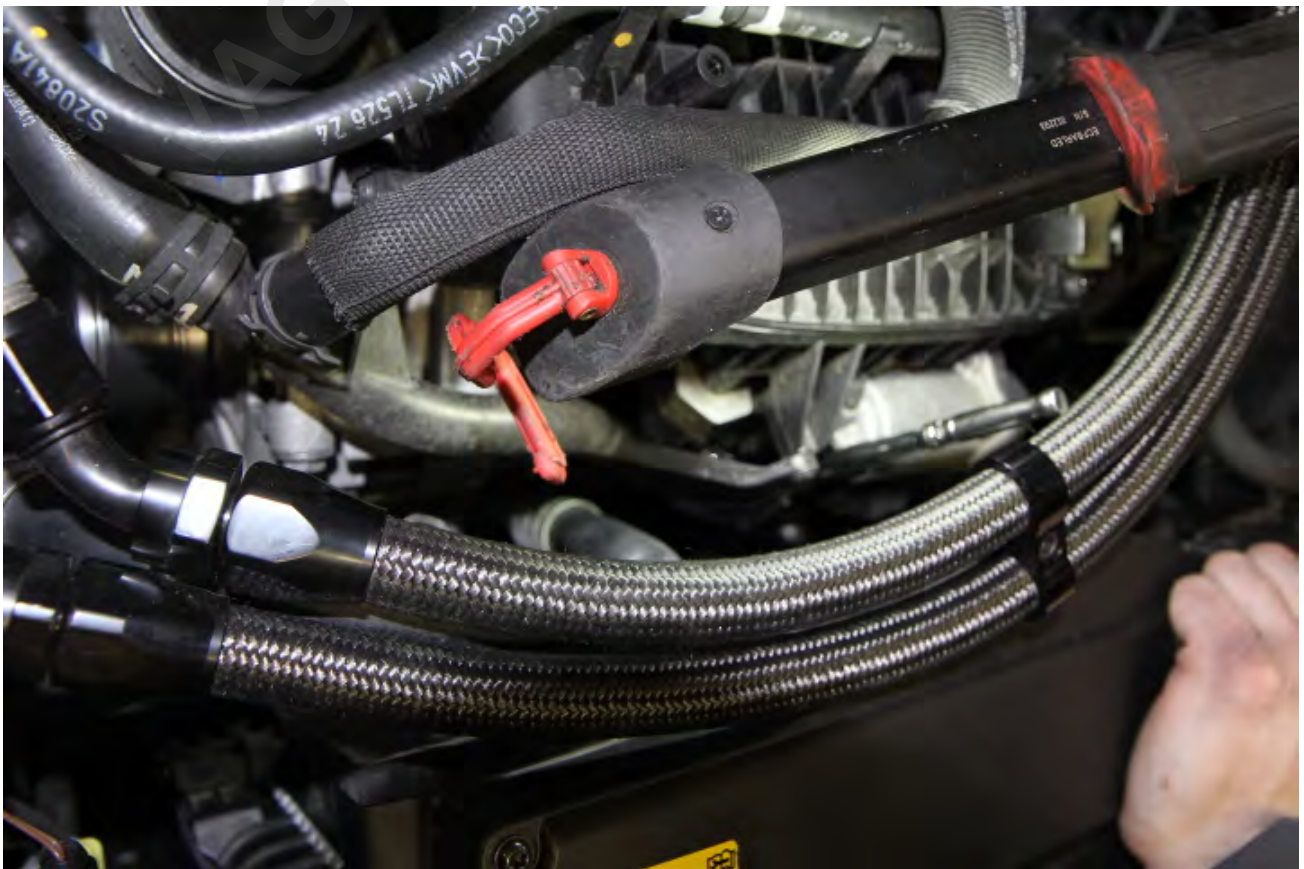

**Step 8** - Remove the throttle pipe



**Step 9** - Remove the map from the throttle pipe using T20 and transfer map to the new pipe



**Step 10** - Slide the clamp over the silicon




**VAG**  
**AUTOSPORT.FR**  
PIÈCES D'ORIGINE ET PERFORMANCE

**Step 11** - Slide the silicon over the throttle body




**Step12** - Loosely thread the bolt for the bracket

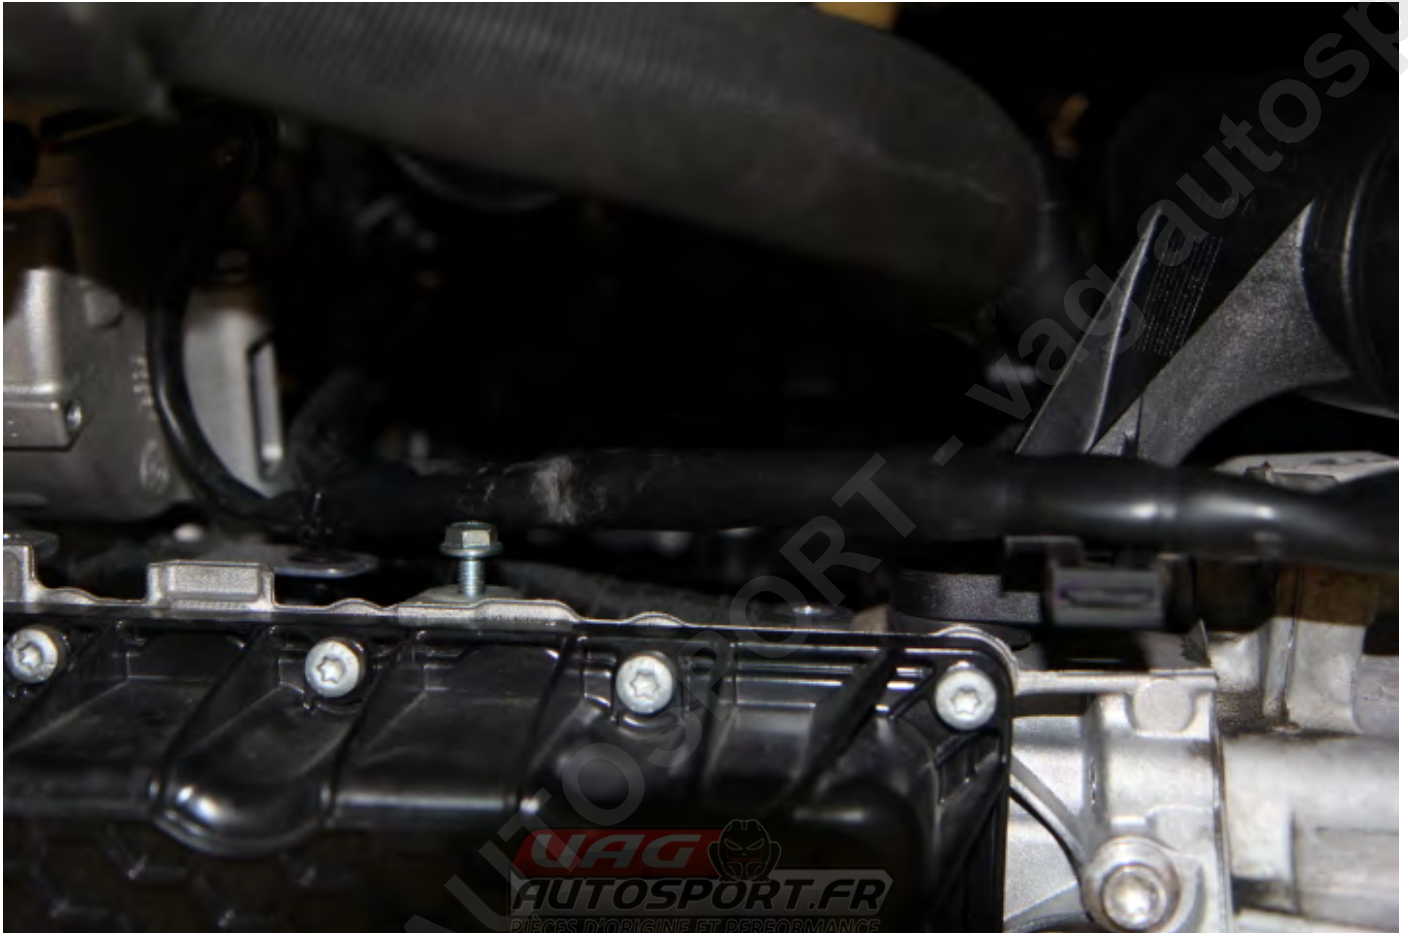

**Step 13** - Slide clamp over pipe and insert pipe into silicon



**Step 14** - Slide the bracket over the bolt

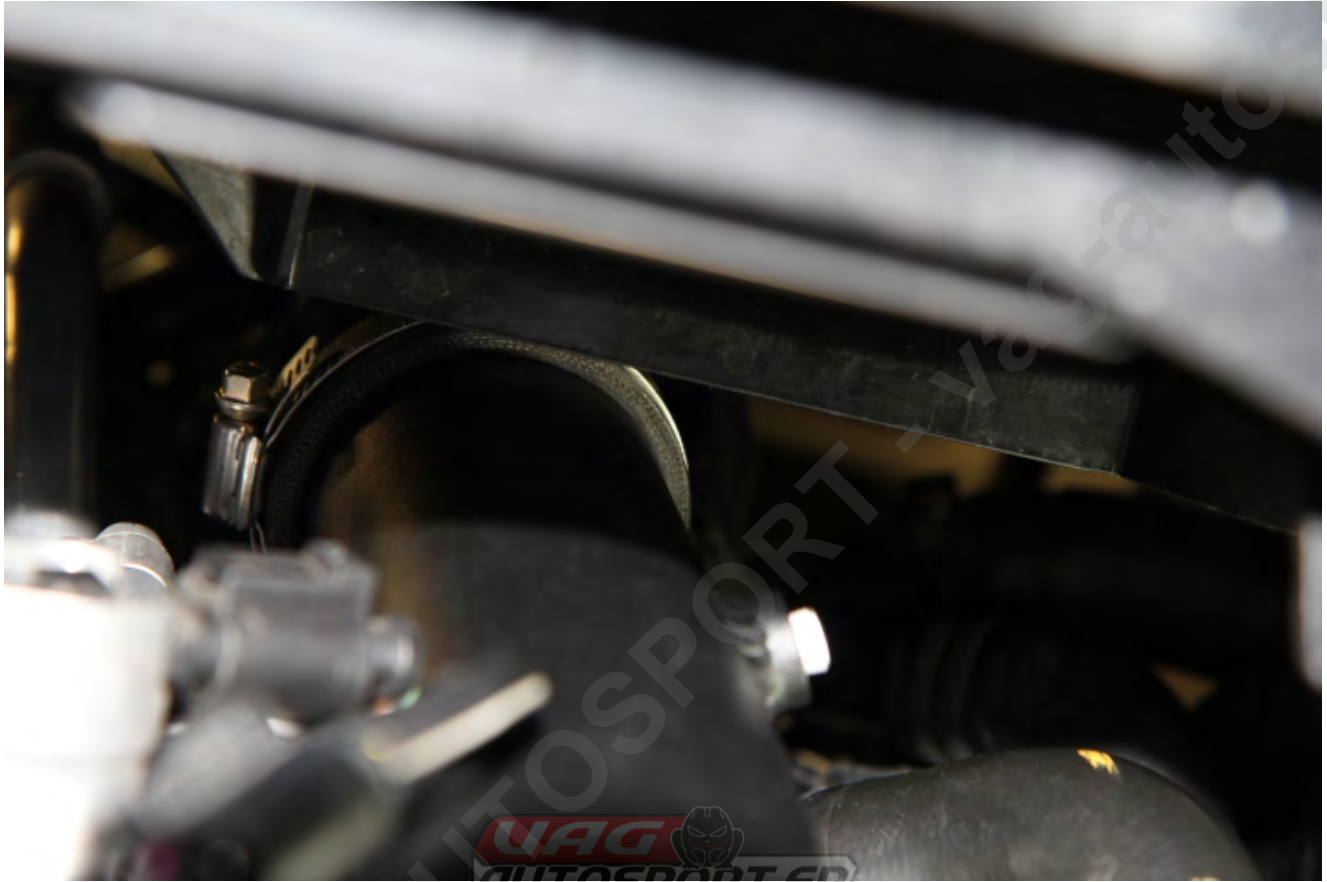

**Step 15** - Plugin the map sensor

**Step 16** - Tighten throttle body clamp



**Step 17 - Tighten the lower clamp**



**Step 18 - Reinstall the intercooler silicon**



**Step 19** - Put the belly pan back



**VAG**  
**AUTOSPORT.FR**  
PIÈCES D'ORIGINE ET PERFORMANCE

**CTS**  
**TURBO**

604.530.3092  
[www.ctsturbo.com](http://www.ctsturbo.com)  
#309-20630 Mufford Cre. Langley