

CTS TURBO

INSTALLATION GUIDE

Audi C7 S6/S7/RS6/RS7
CTS-IT-938



20630 Mufford Crescent, Unit #309
Langley, British Columbia V2Y 2V9

www.CTSTURBO.com

WHAT IS INCLUDED

1. CTS velocity stack air filters
2. Intake pipes
3. Silicone couplers
3. Hardware



NOTES

Vehicle used in this guide is a Audi C7 S6. Always make sure the car is safe to work on. Do not work on a hot motor. We do not accept any liability for incorrect installation or damage during the install.

STEP 1

Remove the engine cover



STEP 2

Loosen the clamps holding the stock intake pipes to the turbo inlet pipes.

Pull and remove the intake pipes off the turbo inlets



STEP 3

Unclip the air scoop from the stock air box



STEP 4

Lift and remove the stock air box



STEP 5

Assemble the velocity stack air filters, intake pipes and silicone couplers




VAG
AUTOSPORT.FR
PIÈCES D'ORIGINE ET PERFORMANCE



STEP 6

Install the longer of the intake pipes first as seen in the image

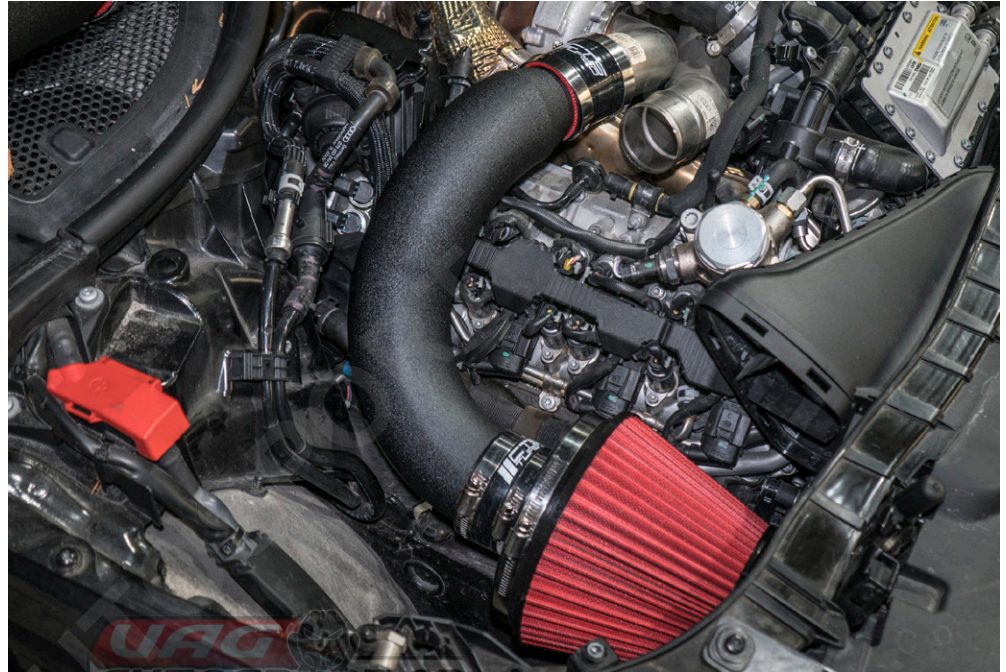

AUTOSPORT.FR
PIÈCES D'ORIGINE ET PERFORMANCE

STEP 8

Install the shorter of the intake pipes.

Make sure to check all clamps are tightened and secure



STEP 9

Reinstall the engine cover and you are done!

