


[ ]

CAR	Audi TT Mk2 2.0 TFSI 06-	PART NO.	SAUC032
YEAR	06-	FIT KITS	180 FK
NOTES	Where not supplied use original fittings	FEATURES	Pipe Diameter:- 76mm/3"

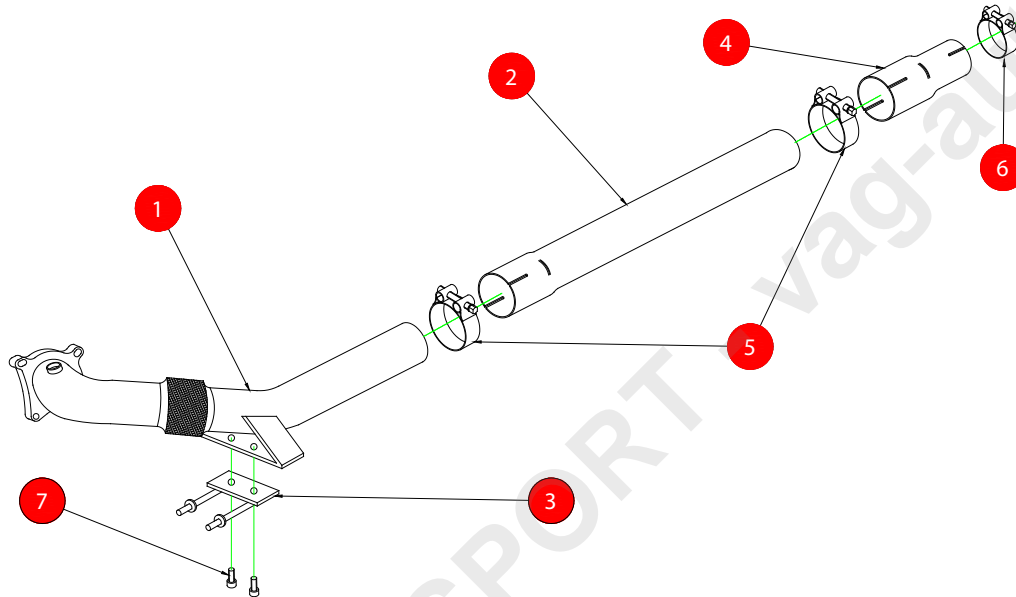

NO.	PART NO.	DESCRIPTION	QTY
1	595VW	Turbo Downpipe De-cat	1
2	596VW	Link Pipe	1
3	677VW	Mounting Bracket	1
Fit Kit			
4	AD72	Adaptor	1
5	Z016.10062	79mm H/D Clamp	2
6	Z016.10005	59-63mm Clamp	1
7	Z017.10808	M8x16mm Cap Head Bolt	2

CLASSIFICATION	Motorsport Use Only
HOMOLOGATED	No
DATE	12/11/14
ISSUE	02
AUTHORISED	T.ROWLEY

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

**\*\* Fitting Instruction \*\***

Fit and Loosely bolt all item's to car, leaving part 677VW until last.

When all parts are loosely fitted, beginning to tighten all bolt's. Starting with 677VW mounting bracket.

Next, tighten the nuts to the turbo. Once all the nuts and bolts are tight, the clamps between the sections can be tightened.

Checked By \_\_\_\_\_

