



<b>Car</b>	Audi TTRS 8S MK3 (GPF models only)	<b>Part No.</b>	SAUS081CF
<b>Year</b>	2019-Current	<b>Fit Kits</b>	391FK
<b>Notes</b>	Where not supplied use original fittings	<b>Features</b>	Pipe Diameter:- 80mm

Estimated Fitting Time: 1 Hour 30 Minutes

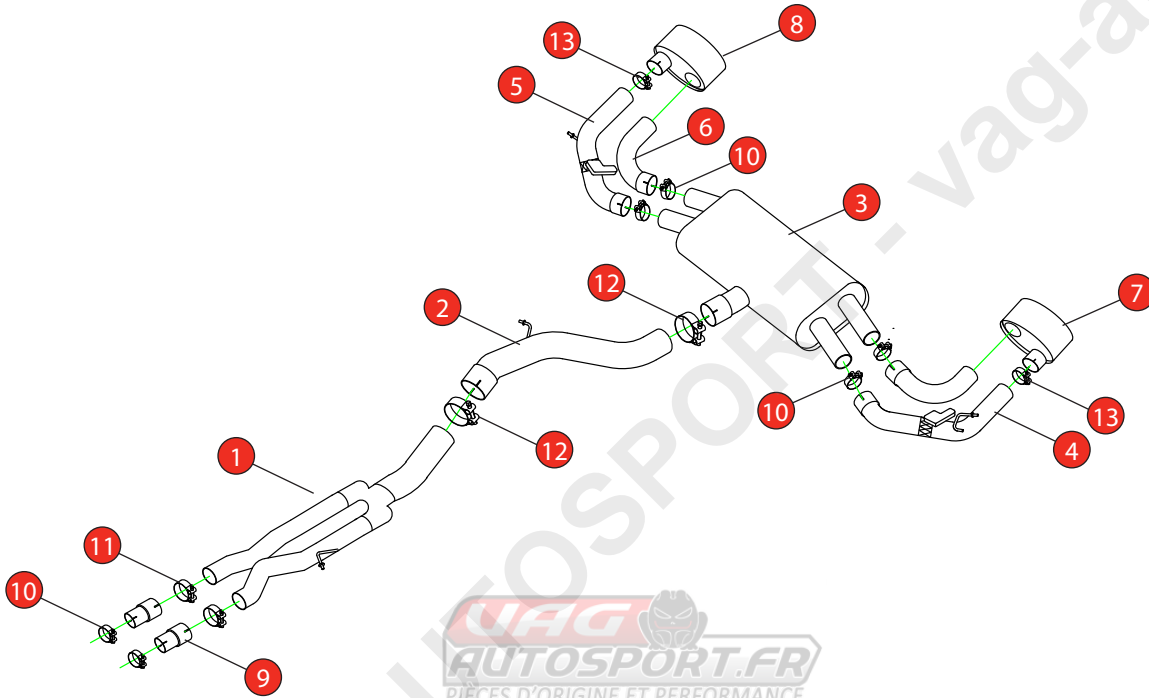

NO.	PART NO.	DESCRIPTION	QTY
1	860AU	Non-resonated Centre Section	1
2	731AU	Link Pipe	1
3	732AU	Rear Silencer	1
4	733AU	L/H Valved Outer Trim Connecting Pipe	1
5	734AU	R/H Valved Outer Trim Connecting Pipe	1
6	861AU	L/H & R/H Inner Trim Connecting Pipe	2
7	Z023.10160	L/H Carbon Ascari Evo Trim	1
8	Z023.10161	R/H Carbon Ascari Evo Trim	1
<b>Fit Kit</b>			
9	AD71	Adaptor	2
10	Z016.10070	65mm H/D Clamp	6
11	Z016.10063	72mm H/D Clamp	2
12	Z016.10069	79-85mm H/D Clamp	2
13	Z016.10064	63-68mm H/D Clamp	2


DATE	03/05/2022
ISSUE	00
AUTHORISED	S Shipley

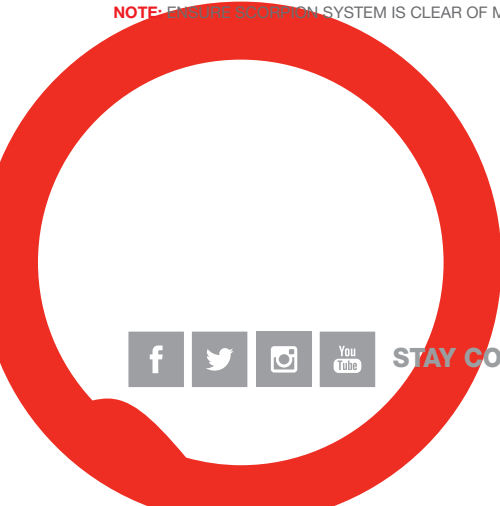**NOTE:** ENTIRE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.


STAY CONNECTED TO RED POWER.

<b>Car</b>	Audi TTRS 8S MK3 (GPF models only)	<b>Part No.</b>	SAUS081CF
<b>Year</b>	2019-Current	<b>Fit Kits</b>	391FK
<b>Notes</b>	Where not supplied use original fittings	<b>Features</b>	Pipe Diameter:- 80mm

Estimated Fitting Time: 1 Hour 30 Minutes

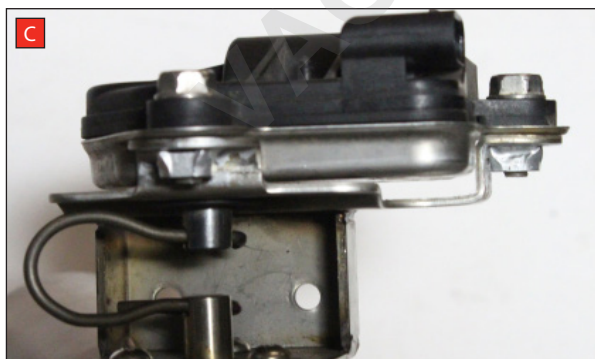

A) Remove the electronic actuator from the original exhaust.

B) On the scorpion product fit the fixing bow into the valve and use the actuator to secure the bow in place.

C) Use the M6 bolts and washers to fasten the actuator to the valve ensuring the two straights on the fixing bow fit between the grooves on both of the posts.

D) Before fitting the Scorpion system, you must rotate the rear mounts by 180° on both sides of the car.

