


CAR	Skoda Octavia vRS 2.0 TFSi	PART NO.	SSKX003
YEAR	2013- 2018	FIT KITS	153FK
NOTES	Where not supplied use original fittings.	FEATURES	Pipe diameter:- 76mm/3"

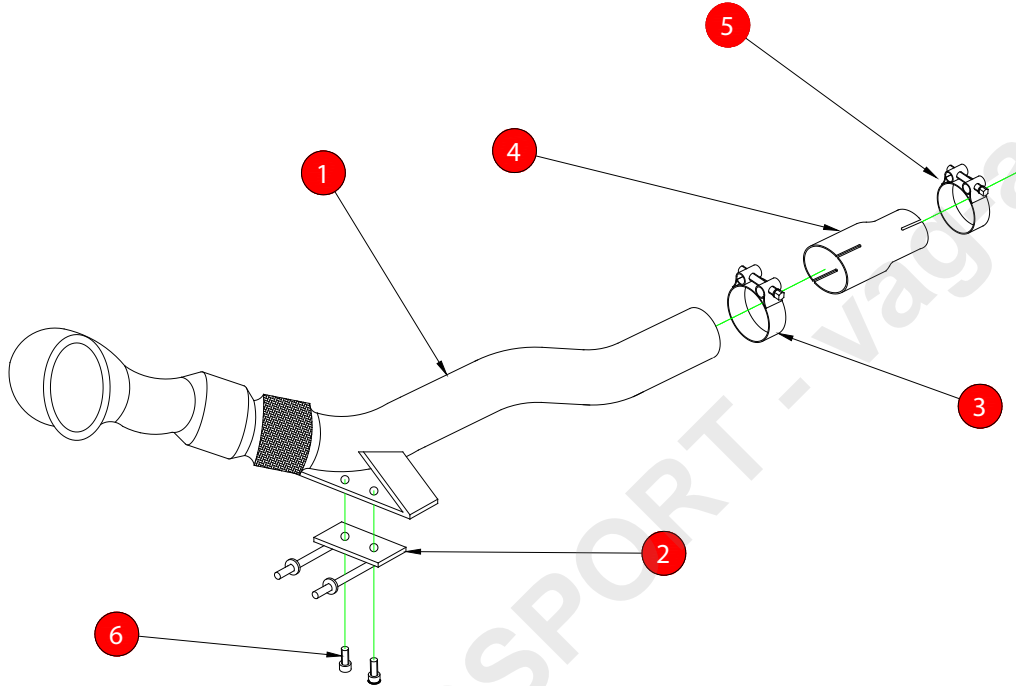


NO.	PART NO.	DESCRIPTION	QTY
1	693VW	Turbo Downpipe Sports-cat	1
2	562AU	Mounting Bracket	1
Fit Kit			
3	Z016.10062	79mm H/D Clamp	1
4	AD69	Adaptor (Only needed to fit to O.E not Scorpion Cat back)	1
5	Z016.10064	65mm H/D Clamp	1
6	Z017.10808	M8x16mm Cap Head Bolts	2

E-MARK	N/A
ISSUE	03
DATE	26/05/20
AUTHORISED	M.YDLIBI

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

Checked By \_\_\_\_\_

CAR	Skoda Octavia vRS 2.0 TFSi	PART NO.	SSKX003
YEAR	2013- Current	FIT KITS	153 FK
NOTES	Where not supplied use original fittings	FEATURES	Pipe diameter:- 76mm/3"

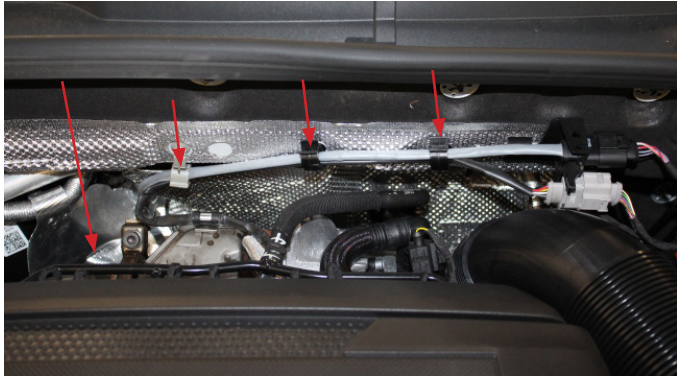

1.

1. Remove Lambda Probe from OE catalyst, then remove cable from clips indicated. (x4)



2.

Feed cable this side.

2. Feed Lambda cable down the right hand side (as you look at the engine)

3. Ensure Lambda cable misses the gear cables, pass to the right hand side (as you look at engine)

4. Take Lambda cable under the engine.

5. Fit probe into Sensor boss and tighten.



3.



4.