


FITTING INSTRUCTIONS

[ ]

CAR	Volkswagen Golf Mk6 Gti 2.0Tsi	PART NO.	SVWC036
YEAR	2009-2013	FIT KITS	021 FK
NOTES	Where not supplied use original fittings	FEATURES	Pipe diameter:- 76mm/3"

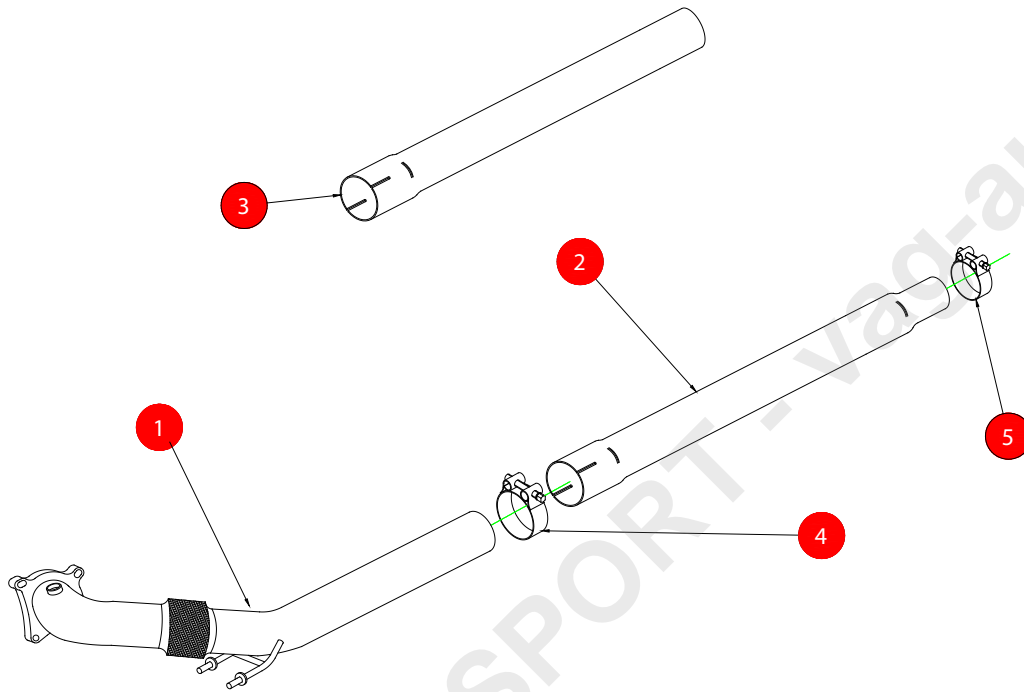

NO.	PART NO.	DESCRIPTION	QTY
1	593VW	Turbo Downpipe De-cat	1
2	592VW	Link Pipe (TO CONNECT TO O.E)	1
3	586VW	Link Pipe (TO CONNECT TO SCORPION SVW036 or SVWS036 use instead of 592VW)	1
Fit Kit			
4	Z016.10062	Heavy Duty Clamp 79.2mm	1
5	Z016.10001	59-63mm Clamp	1

CLASSIFICATION	Motorsport Use Only
HOMOLOGATED	No
DATE	12/07/12
ISSUE	02
AUTHORISED	T.ROWLEY

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

Checked By \_\_\_\_\_

