


|              |  |                 |                      |
|--------------|--|-----------------|----------------------|
| <b>Car</b>   | Volkswagen Scirocco R 2.0 TSi            | <b>Part No.</b> | SVWS041C             |
| <b>Year</b>  | 2009-2017                                | <b>Fit Kits</b> | 093FK                |
| <b>Notes</b> | Where not supplied use original fittings | <b>Features</b> | Pipe Diameter:- 76mm |

Estimated Fitting Time: 60 Minutes

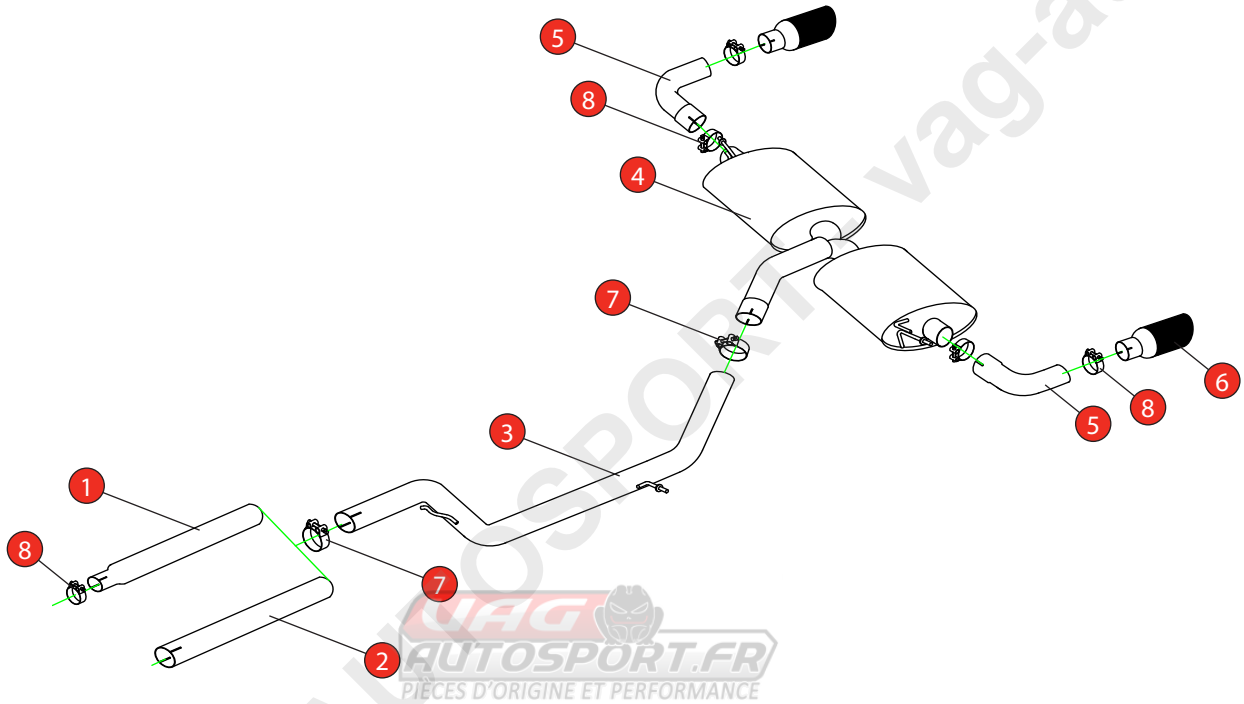

| NO.            | PART NO.   | DESCRIPTION                                  | QTY |
|----------------|------------|--|-----|
| 1              | 619VW      | Link Pipe (to fit to original front section) | 1   |
| 2              | 586VW      | Link Pipe (to fit to Scorpion front section) | 1   |
| 3              | 590VW      | Non-resonated Centre Section                 | 1   |
| 4              | 747VW      | Rear Silencer                                | 1   |
| 5              | 691BM      | Trim Connecting Pipe                         | 2   |
| 6              | Z023.10055 | Ø100mm Black Ceramic Coated Daytona Trim     | 2   |
| <b>Fit Kit</b> |            |  |     |
| 7              | Z016.10062 | 79.2mm H/D Clamp                             | 2   |
| 8              | Z016.10064 | 63-68mm H/D Clamp                            | 5   |
| 9              | Z016.10057 | Hanging Rubber                               | 1   |

|            |          |
|------------|----------|
| E-MARK     | N/A      |
| DATE       | 23/10/19 |
| ISSUE      | 04       |
| AUTHORISED | M.Ydlibi |

**NOTE:** ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.  
 Before removing the original exhaust you need to disconnect the pneumatic valve hose. We recommend you use a small bolt or similar item to plug the hose and to fasten it out of sight.



STAY CONNECTED TO RED POWER.